


Instruction Manual

RESIDENTIAL ELECTRIC WATER HEATERS



500 Tennessee Waltz Parkway
Ashland City, TN 37015

Saudi Arabia and Kuwait Manual
INSTALLATION - OPERATION - SERVICE
- MAINTENANCE - LIMITED WARRANTY

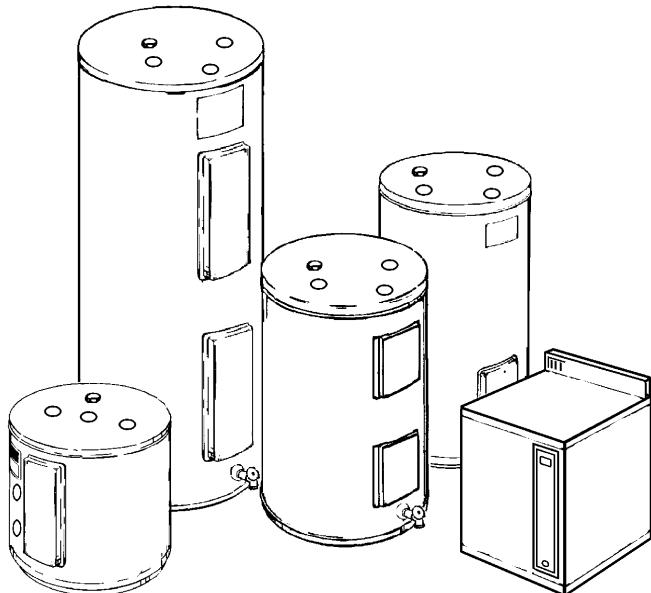

Thank you for buying this energy efficient water heater.
We appreciate your confidence in our products.

⚠ WARNING

Read and understand this instruction manual and the safety messages herein before installing, operating, or servicing this water heater.

Failure to follow these instructions and safety messages could result in death or serious injury.

This manual must remain with the water heater.



⚠ WARNING

If the water heater becomes immersed in water up to or above the level of the bottom of the element doors, the heater should be examined by a qualified service agency before it is placed in operation, see Page 2.

PLACE THESE INSTRUCTIONS ADJACENT TO HEATER AND NOTIFY OWNER TO KEEP FOR FUTURE REFERENCE.

SAFE INSTALLATION, USE, AND SERVICE

The proper installation, use and servicing of this water heater is extremely important to your safety and the safety of others.

Many safety-related messages and instructions have been provided in this manual and on your own water heater to warn you and others of a potential injury hazard. Read and obey all safety messages and instructions throughout this manual. It is very important that the meaning of each safety message is understood by you and others who install, use, or service this water heater.

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or injury.
 WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or injury.
 CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
CAUTION	CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in property damage.

All safety messages will generally tell you about the type of hazard, what can happen if you do not follow the safety message, and how to avoid the risk of injury.

IMPORTANT DEFINITIONS

- Qualified Installer or Service Agency:**

Installation and service of this water heater requires ability equivalent to that of a Qualified Agency (as defined by ANSI below) in the field involved. Installation skills such as plumbing, electrical supply are required in addition to electrical testing skills when performing service.

- ANSI Z223.1 2006 Sec. 3.3.83:**

"Qualified Agency" - "Any individual, firm, corporation or company that either in person or through a representative is engaged in and is responsible for (a) the installation, testing or replacement of gas piping or (b) the connection, installation, testing, repair or servicing of appliances and equipment; that is experienced in such work; that is familiar with all precautions required; and that has complied with all the requirements of the authority having jurisdiction."



GENERAL SAFETY INFORMATION

PRECAUTIONS

DO NOT USE THIS WATER HEATER IF ANY PART HAS BEEN UNDER WATER. Immediately call a qualified service technician to inspect the water heater and to replace any part of the control system which has been under water.

If the unit is exposed to the following, do not operate heater until all corrective steps have been made by a qualified service agency.

1. External fire.
2. Damage.
3. Firing without water.

This appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to insure they do not play with the appliance.


GROUNDING INSTRUCTIONS

This water heater must be grounded in accordance with the National Electrical Code and/or Local/National codes. These must be followed in all cases. Failure to ground this water heater properly may also cause erratic control system operation on ELECTRONIC CONTROL models.

This water heater must be connected to a grounded metal, permanent wiring system; or an equipment grounding conductor

must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the water heater.

HYDROGEN GAS (FLAMMABLE)

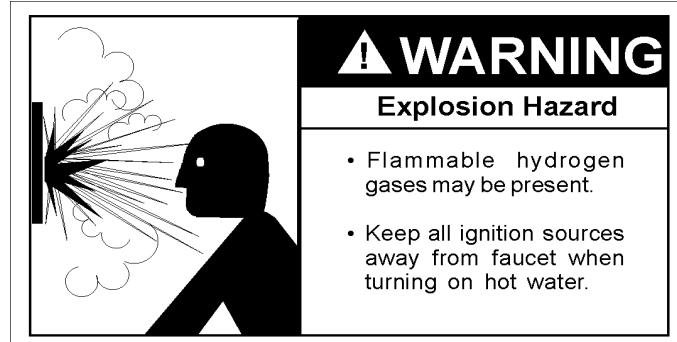

Hydrogen gas can be produced in a hot water system served by this heater that has not been used for a long period of time (generally two weeks or more). Hydrogen gas is extremely flammable. To reduce the risk of injury under these conditions, it is recommended that the hot water faucet be opened for several minutes at the kitchen sink before using any electrical appliance connected to the hot water system. If hydrogen is present there will probably be an unusual sound such as air escaping through the pipe as the water begins to flow. THERE SHOULD BE NO SMOKING OR OPEN FLAME NEAR THE FAUCET AT THE TIME IT IS OPEN.

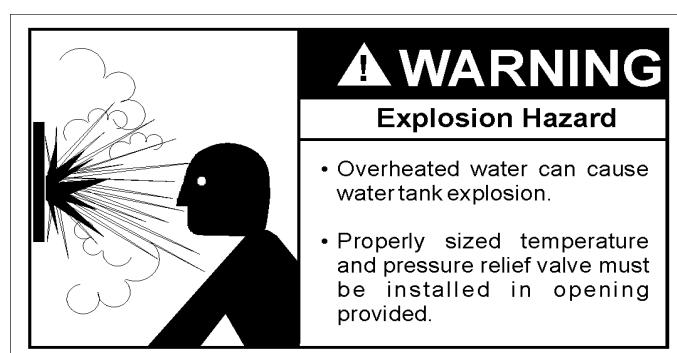
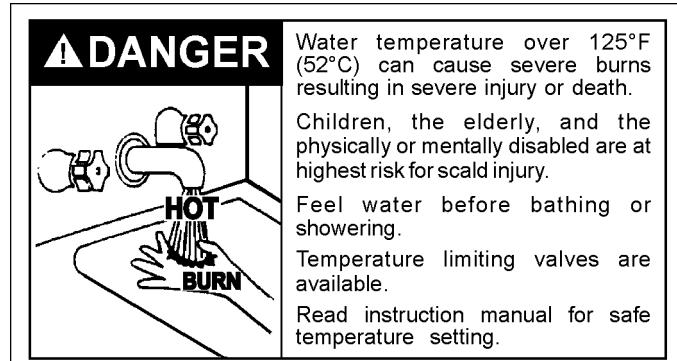
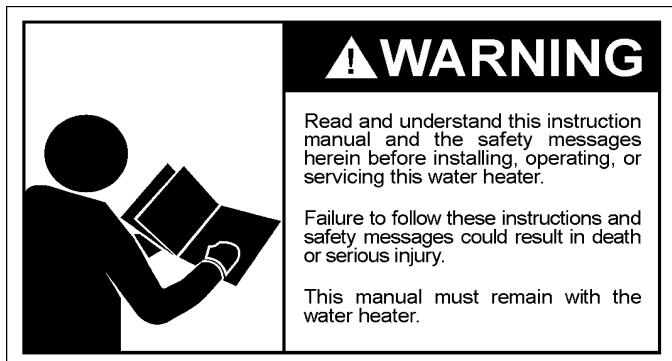


TABLE OF CONTENTS

SAFE INSTALLATION, USE, AND SERVICE	2	Closed Water Systems.....	10
GENERAL SAFETY INFORMATION.....	3	Thermal Expansion.....	10
Precautions	3	ELECTRICAL	11
Hydrogen Gas (Flammable)	3	General	11
INTRODUCTION.....	4	Branch Circuit	11
Preparing for the Installation	4	Calculating Amperage/Overcurrent Protection.....	11
MODEL AND RATING	5	WIRING DIAGRAMS.....	12
FEATURES AND COMPONENTS	6	OPERATION.....	13
Electronic Control Models	6	General	13
LOCATING THE NEW WATER HEATER	7	Filling the Water Heater	13
Facts to Consider About the Location	7	Initial Start Up	13
Clearances	7	Draining the Water Heater	13
USER INFORMATION	7	TEMPERATURE REGULATION	14
Thermostat Settings-Surface Mount Controls	7	Temperature Adjustment.....	14
USER CARE	7	MAINTENANCE	15
Draining the Water Heater	7-8	General	15
Filling the Water Heater	8	Anode Rod Inspection.....	15
INSTALLATION	9	TROUBLESHOOTING CHECKLIST	16
Required Ability	9	Checklist	16
General	9	Leakage Checkpoints	17
Contaminated Water	9	WARRANTY	18-19
Circulating Pump.....	9	Repair Parts List	20-21
Insulation Blankets.....	9	NOTES	22-24
Temperature-Pressure Relief Valve	9-10		

Note:

USER/OWNER (BOLD TEXT)

QUALIFIED INSTALLER/SERVICE AGENCY ONLY (STANDARD TEXT).

INTRODUCTION

Thank You for purchasing this water heater. Properly installed and maintained, it should give you years of trouble free service. Installation and service of this water heater requires ability equivalent to that of a licensed tradesman or qualified agency (page 2) in the field involved. Plumbing and electrical work are required.

Abbreviations Found In This Instruction Manual:

- ANSI - American National Standards Institute
- ASME - American Society of Mechanical Engineers
- NEC - National Electrical Code
- NFPA - National Fire Protection Association
- UL - Underwriters Laboratory

PREPARING FOR THE INSTALLATION

1. Read the "General Safety Information" section of this manual first and then the entire manual carefully. If you don't follow the safety rules, the water heater may not operate safely. It could cause DEATH, SERIOUS BODILY INJURY AND/OR PROPERTY DAMAGE.

This manual contains instructions for the installation, operation, and maintenance of the electric water heater. It also contains warnings throughout the manual that you must read and be aware of. All warnings and all instructions are essential to the proper operation of the water heater and your safety.

READ THE ENTIRE MANUAL BEFORE ATTEMPTING TO INSTALL OR OPERATE THE WATER HEATER.

The model and rating plates on page 5 interprets certain markings into useful information. Both of these references should be used to identify the heater, its components and optional equipment.

2. The installation must conform with these instructions and the Local/National code authority having jurisdiction and the requirements of the power company. In the absence of Local/National codes, the installation must comply with the latest editions of the National Electrical Code, NFPA 70 or the Canadian Electrical Code CSA C22.1. The National Electrical Code may be ordered from: National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02269. The Canadian Electrical Code is available from the Canadian Standards Association, 8501 East Pleasant Valley Road, Cleveland, OH 44131. Qualified Installer must install an all pole, full disconnect switch, per the Local/National code.

3. If after reading this manual you have any questions or do not understand any portion of the instructions, call the toll free number listed on the back cover of this manual for technical assistance.

A sample rating plate is shown on page 5 of this manual. In order to expedite your request, please have full model and serial number available for the technician.

4. Carefully plan your intended placement of the water heater. Examine the location to ensure the water heater complies with the "Locating the New Water Heater" section in this manual.

Installation and service of this water heater requires ability equivalent to that of a licensed tradesman or qualified agency (page 2) in the field involved. Plumbing and electrical work are required.

MODEL AND RATING

RESIDENTIAL STORAGE TANK WATER HEATER IPX1

MODEL NUMBER		SERIAL NUMBER		ITEM ID / PART NUMBER			
Ph (PHASE)	V (VOLTS)	Hz (HERTZ)	No. of ELEMENTS	W (WATTS) EACH	W (WATTS) TOTAL	MAXIMUM WORKING PRESSURE	
						PSI	kPa
CAPACITY							
US GAL	I (LITERS)						

RATING PLATE

FEATURES AND COMPONENTS

This page shows typical water heater installations by model designations.

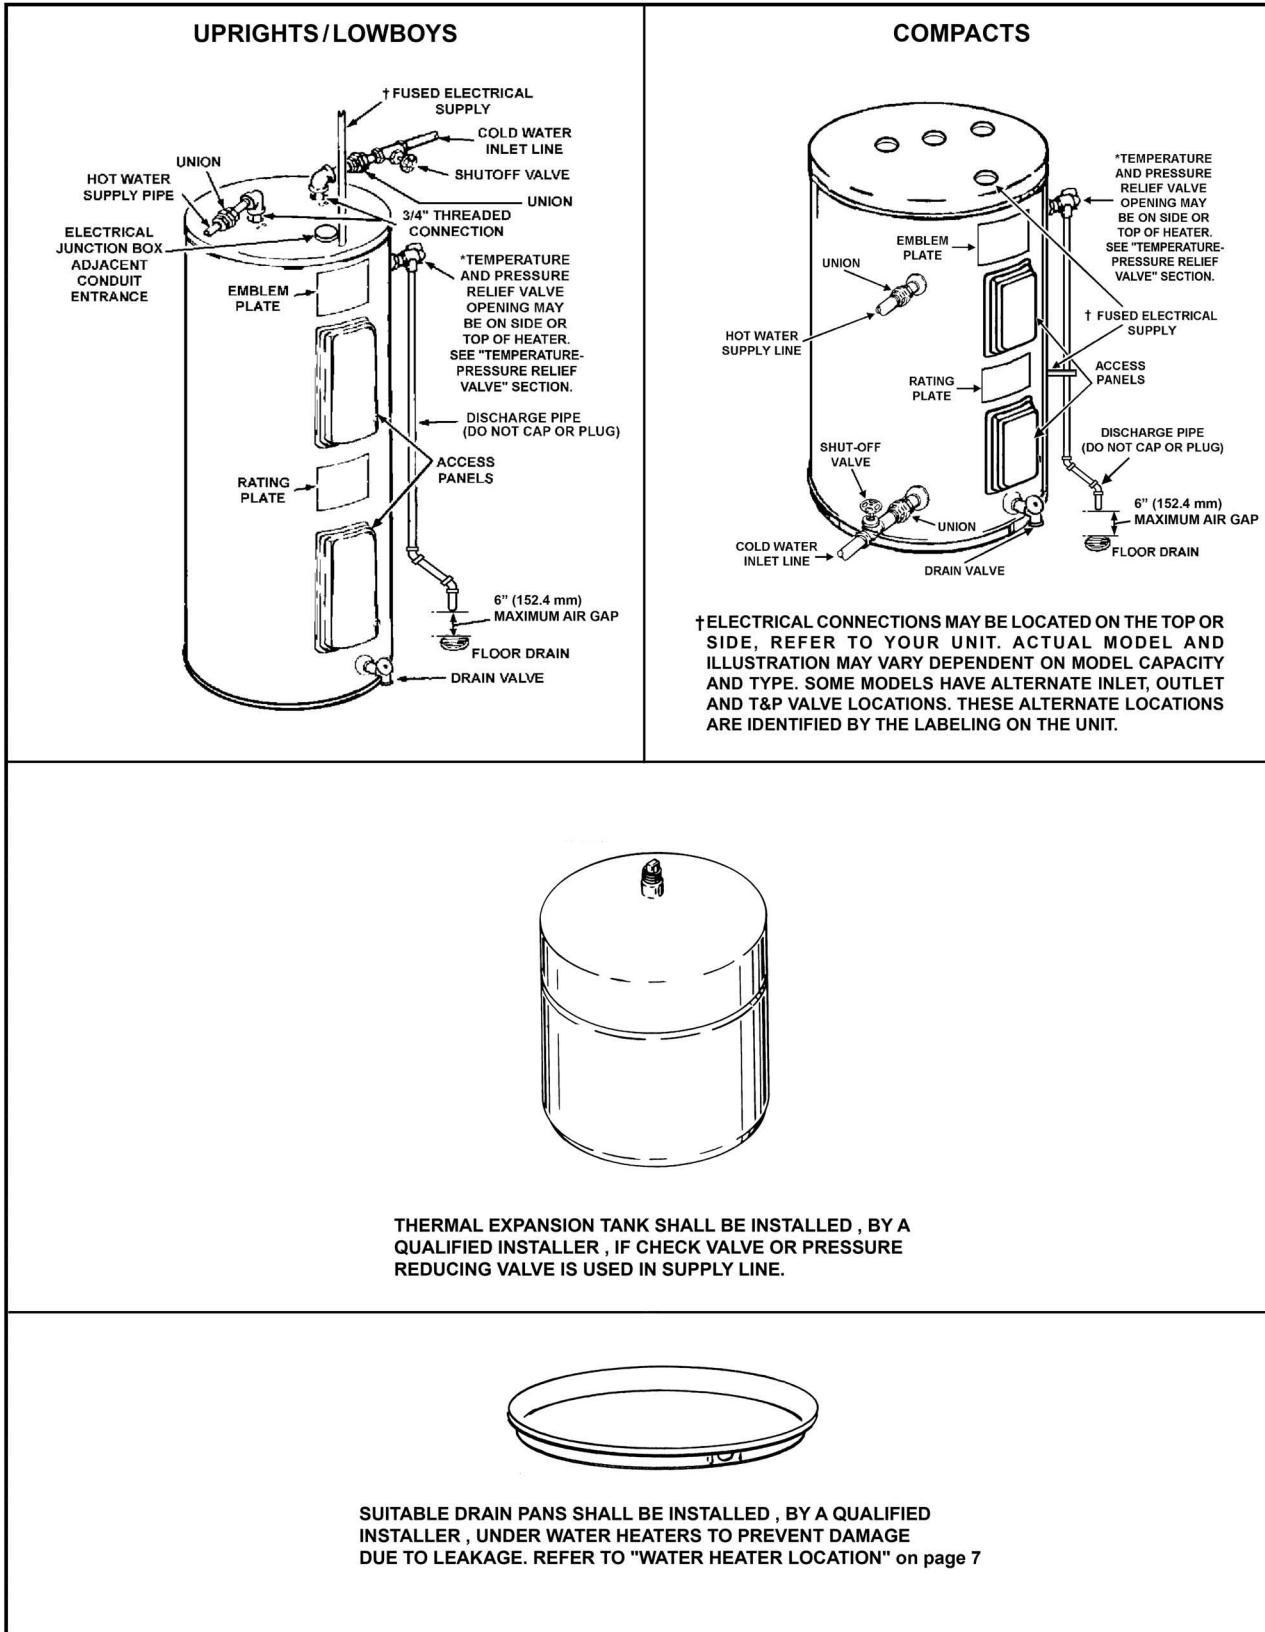


FIGURE 1

LOCATING THE NEW WATER HEATER

FACTS TO CONSIDER ABOUT THE LOCATION

CAUTION

Property Damage Hazard

- All water heaters eventually leak
- Do not install without adequate drainage.

The water heater should be located as close as possible to/or centralized to the water piping system. The water heater should be located in an area not subject to freezing temperatures.

The water heater should be located in an area where leakage of the tank or connections will not result in damage to the area adjacent to the heater or to lower floors of the structure.

When such locations cannot be avoided, a suitable drain pan should be installed by a qualified installer, under the heater.

Such pans should be at least two 2" (5.1 cm) deep, have a minimum length and width of at least 2" (5.1 cm) greater than the diameter of the heater and should be piped to an adequate drain.

Water heater life depends upon water quality, water pressure and the environment in which the water heater is installed. Water heaters are sometimes installed in locations where leakage may result in property damage, even with the use of a drain pan piped to a drain. However, unanticipated damage can be reduced or prevented by a leak detector or water shut-off device used in conjunction with a

piped drain pan. These devices are available from some plumbing supply wholesalers and retailers, and detect and react to leakage in various ways:

- Sensors mounted in the drain pan that trigger an alarm or turn off incoming water to water heater when leakage is detected.
- Sensors mounted in the drain pan that turn off the water supply to the entire home when water is detected in the drain pan.
- Water supply shut-off devices that activate based on the water pressure differential between the cold water and how water pipes connected to the water heater.

CLEARANCES

A minimum clearance of 4" (10.2 cm) must be allowed for access to replaceable parts such as thermostats, drain valve and relief valve.

Adequate clearance for servicing this water heater should be considered before installation, such as changing the anodes, etc.

⚠ FLOOD WARNING

IF THE HEATER BECOMES IMMERSED IN WATER UP TO OR ABOVE THE LEVEL OF THE BOTTOM OF THE ELEMENT DOORS, THE HEATER SHOULD BE EXAMINED BY A COMPETENT SERVICE PERSON BEFORE IT IS PLACED IN OPERATION.

USER INFORMATION

THERMOSTAT SETTINGS-SURFACE MOUNT CONTROLS

Adjustment of temperature controls on surface mounted controls is to be performed by a qualified service agent at initial start-up.

USER CARE


Water may drip from the discharge pipe of the pressure relief device and this pipe must be left open to the atmosphere.

The pressure relief device must be operated at least once a year to insure proper operation, verify that it is not blocked and to remove lime deposits. This is to be done by a Qualified Service Agent as a part of the regular maintenance.

DRAINING THE WATER HEATER

The water heater must be drained if it is to be shut down and exposed to freezing temperatures. Maintenance and service procedures may also require draining the heater.

FILLING THE WATER HEATER

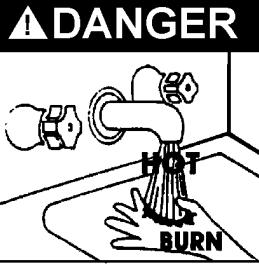

- Burn hazard
- Hot water discharge.
- Keep clear of relief valve/drain valve discharge outlet.

1. Turn off the electrical disconnect switch.
 2. Open a hot water valve until the water is cool, then close the supply water inlet valve to heater.
 3. Attach hose to outlet opening of drain valve and direct end to drain.
 4. Open the heater drain valve.
 5. If the heater is being drained for an extended shutdown, it is suggested the drain valve be left open during this period. The hose may be removed.
- Follow FILLING instructions when restoring hot water service.

CAUTION

Property Damage Hazard

In order to avoid water heater damage, fill tank with water before operating.

1. Turn off the electrical disconnect switch.
2. Close the water heater drain valve.
3. Open a nearby hot water faucet to permit the air in the system to escape.
4. Fully open the cold water inlet pipe valve allowing the heater and piping to be filled.
5. Close the hot water faucet as the water starts to flow. The heater is now ready for STARTUP and TEMPERATURE REGULATION.

**THE FOLLOWING PAGES ARE FOR
INSTALLATION, SERVICE/MAINTENANCE AND
TROUBLESHOOTING.
THESE INSTRUCTIONS ARE TO BE USED AND
PERFORMED BY A QUALIFIED INSTALLER OR
SERVICE AGENCY ONLY.**

INSTALLATION

CAUTION

In order to avoid a hazard due to inadvertent resetting of the thermal cutoff, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

REQUIRED ABILITY

Installation and service of this water heater requires ability equivalent to that of a qualified installer or service agency (page 2) in the field involved. Plumbing and electrical work is required.


GENERAL

The installation must conform with these instructions and the Local/National code authority having jurisdiction and the requirements of the power company. In the absence of Local/National codes, the installation must comply with the latest editions of the National Electrical Code, NFPA 70 or the Canadian Electrical Code CSA C22.1. The National Electrical Code may be ordered from: National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02269. The Canadian Electrical Code is available from the Canadian Standards Association, 8501 East Pleasant Valley Road, Cleveland, OH 44131.

Do **NOT** test the electrical system before the heater is filled with water, follow the START UP procedure in the OPERATION section of this manual.

The principal components of the heater are identified in the Features and Components illustrations on page 6.

DANGER

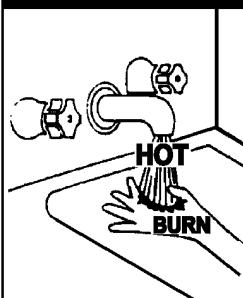

Water temperature over 125°F (52°C) can cause severe burns resulting in severe injury or death.

Children, the elderly, and the physically or mentally disabled are at highest risk for scald injury.

Feel water before bathing or showering.

Temperature limiting valves are available.

Read instruction manual for safe temperature setting.

MIXING VALVE USAGE:

Water heaters are intended to produce hot water. Water heated to a temperature which will satisfy space heating, clothes washing, dish washing, cleaning and other sanitizing needs can scald and permanently injure you upon contact. Some people are more likely to be permanently injured by hot water than others. These include the elderly, children, the infirm, or physically/developmentally disabled. If anyone using hot water in your home fits into one of these groups or if there is a Local/National code or state law requiring a maximum water temperature at the hot water tap, then you must take special precautions. In addition to using the lowest possible temperature setting that satisfies your hot water needs, a means such as a **MIXING VALVE**, should be used at the hot water taps used by these people or at the water heater.

MIXING VALVES for reducing point of use temperature are available and are to be set at a maximum of 125 degree F (52°C). Consult a qualified installer or service agency. Follow all manufacturer's Instructions for installation of these valves. Before changing the factory setting on the thermostat, read the "Temperature Regulation" section in this manual.

WARNING

Toxic Chemical Hazard

- Do not connect to non-potable water system.

CONTAMINATED WATER

This water heater shall not be connected to any heating system(s) or component(s) used with a non-potable water heating appliance.

Toxic chemicals, such as those used for boiler treatment shall not be introduced into this system.

CIRCULATING PUMP

Field installed circulating pumps should be of all bronze construction.

INSULATION BLANKETS

Insulation blankets are available to the general public for external use on electric water heaters but are not necessary with this product. The purpose of an insulation blanket is to reduce the standby heat loss encountered with storage tank heaters. Your water heater meets or exceeds the EPACT and ASHRAE/IES 90.1 standards with respect to insulation and standby loss requirements, making an insulation blanket unnecessary.


Should you choose to apply an insulation blanket to this heater, you should follow these instructions below. Failure to follow these instructions can result in fire, serious personal injury, or death.

- Do not cover the temperature and pressure relief (T & P) valve with an insulation blanket.
- Do not cover the instruction manual. Keep it on the side of the water heater or nearby for future reference.
- Do obtain new warning and instruction labels for placement on the blanket directly over the existing labels.

TEMPERATURE-PRESSURE RELIEF VALVE

WARNING

Explosion Hazard

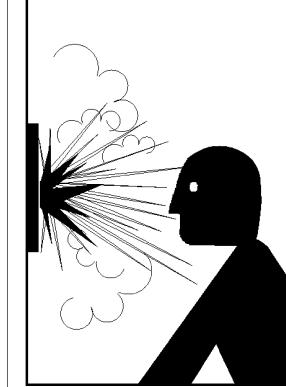

- Temperature-pressure relief valve must comply with ANSI Z21.22 and ASME code.
- Properly sized temperature-relief valve must be installed in opening provided.
- Failure to install relief valve can result in overheating and excessive tank pressure.
- Failure to follow these instructions can cause serious injury or death.

This water heater is provided with a properly rated/sized and certified combination temperature - pressure relief valve by the

manufacturer. The valve is certified by a nationally recognized testing laboratory that maintains periodic inspection of production of listed equipment of materials as meeting the requirements for Relief Valves for Hot Water Supply Systems, ANSI Z21.22 • CSA 4.4, and the code requirements of ASME.

If replaced, the new valve must meet the requirements of Local/National codes, but not less than a combination temperature and pressure relief valve rated/sized and certified as indicated in the above paragraph. The new valve must be marked with a maximum set pressure not to exceed the marked hydrostatic working pressure of the water heater (150 psi = 1,035 kPa) and a discharge capacity not less than the water heater Btu/hr or KW input rate as shown on the water heater's model rating plate.

For safe operation of the water heater, the temperature and pressure relief valve must not be removed from its designated opening nor plugged. The temperature-pressure relief valve must be installed directly into the fitting of the water heater designed for the relief valve. Install discharge piping so that any discharge will exit only within 6 inches (15.2 cm) above, or at any distance below the structural floor. Be certain that no contact is made with any live electrical part. The discharge opening must not be blocked or reduced in size under any circumstances. Excessive length, over 30 feet (9.14 m), or use of more than four elbows can cause restriction and reduce the discharge capacity of the valve.

No valve or other obstruction is to be placed between the relief valve and the tank. Do not connect discharge piping directly to the drain unless a 6" (15.2 cm) air gap is provided. To prevent bodily injury, hazard to life, or property damage, the relief valve must be allowed to discharge water in adequate quantities should circumstances demand. If the discharge pipe is not connected to a drain or other suitable means, the water flow may cause property damage.

CAUTION

Water Damage Hazard


- Temperature-pressure relief valve discharge pipe must terminate at adequate drain.

The Discharge Pipe:

- Shall not be smaller in size than the outlet pipe size of the valve, or have any reducing couplings or other restrictions.
- Shall not be plugged or blocked.
- Shall be of material listed for hot water distribution.
- Shall be installed so as to allow complete drainage of both the temperature-pressure relief valve and the discharge pipe.
- Must terminate a maximum of 6" (15.2 cm) above a floor drain or external to the building. In cold climates, it is recommended that the

discharge pipe be terminated at an adequate drain inside the building.

- Shall not have any valve or other obstruction between the relief valve and the drain.

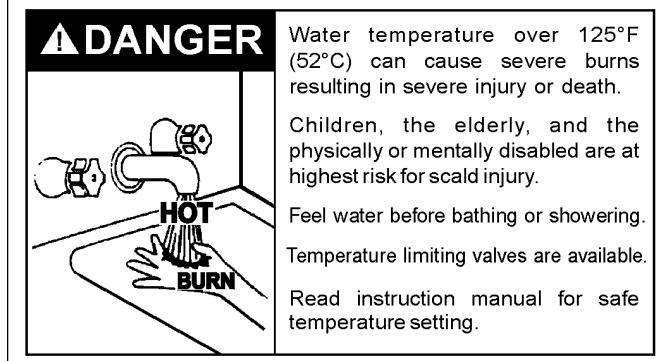

The temperature-pressure relief valve must be manually operated at least once a year. Caution should be taken to ensure that (1) no one is in front of or around the outlet of the temperature-pressure relief valve discharge line, and (2) the water manually discharged can cause bodily injury or property damage because the water may be extremely hot. If after manually operating the valve, it fails to completely reset and continues to release water, immediately close the cold water inlet to the water heater, follow the draining instructions in this manual, and replace the temperature-pressure relief valve with a properly rated/sized new one.

If you do not understand these instructions or have any questions regarding the temperature-pressure relief valve call the toll free number listed on the back cover of this manual for technical assistance.

CLOSED WATER SYSTEMS


Water supply systems may, because of code requirements or such conditions as high line pressure, among others, have installed devices such as pressure reducing valves, check valves, and back flow preventers. Devices such as these cause the water system to be a closed system.

THERMAL EXPANSION

As water is heated, it expands (thermal expansion). In a closed system the volume of water will grow when it is heated. As the volume of water grows there will be a corresponding increase in water pressure due to thermal expansion. Thermal expansion can cause premature tank failure (leakage). This type of failure is not covered under the limited warranty. Thermal expansion can also cause intermittent temperature-pressure relief valve operation: water discharged from the valve due to excessive pressure build up. This condition is not covered under the limited warranty. The temperature-pressure relief valve is not intended for the constant relief of thermal expansion.

A properly sized thermal expansion tank should be installed on all closed systems to control the harmful effects of thermal expansion. Contact a local plumbing service agency to have a thermal expansion tank installed.

ELECTRICAL

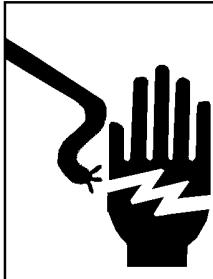

WARNING

- Before removing any access panels or servicing the water heater, make sure the electrical supply to the water heater is turned "OFF."
- Failure to do this could result in death, serious bodily injury, or property damage.

GENERAL

Installation must conform with these instructions and Local/National code authority having jurisdiction and requirements of the power company. In the absence of Local/National codes, the installation must comply with current editions of the National Electrical Code, NFPA 70 or the Canadian Electrical Code CSA C22.1.

An electrical ground is required to reduce risk of electrical shock or possible electrocution. The water heater should be connected to a separate grounded branch circuit with overcurrent protection and an all pole, full disconnect switch. The water heater should be grounded in accordance with Local/National codes.

Voltage applied to the heater should not vary more than +5% to -10% of the model and rating plate marking for satisfactory operation.

DO NOT ENERGIZE THE BRANCH CIRCUIT FOR ANY REASON BEFORE THE HEATER TANK IS FILLED WITH WATER. DOING SO WILL CAUSE THE HEATING ELEMENTS TO BURN OUT AND VOID WARRANTY.

The factory wiring is attached to a terminal block within the external junction box unit. The branch circuit is connected to the terminal block within this junction box. The water heater should be connected to a separate, grounded, branch circuit with overcurrent protection and disconnect switch. The water heater should be grounded in accordance with Local/National codes.

BRANCH CIRCUIT

The branch circuit wire size should be established through reference to the current edition of NFPA-70, the National Electrical Code or other locally approved source in conjunction with the heater amperage rating. For convenience, portions of the wire size tables from the Code are reproduced here. The branch circuit should be sized at 125 percent of the heater rating and further increase wire size as necessary to compensate for voltage drop in long runs.

CALCULATING AMPERAGE/OVERCURRENT PROTECTION

The rating of the overcurrent protection should be computed on the basis of 125 percent of the total connected load amperage. Where the standard ratings and settings do not correspond with this computation, the next higher standard rating or setting should be selected.

Portion of Table 310-16 (NFPA-70) follows:

Allowable Ampacities of Insulated Copper Conductors. Not more than three conductors in Raceway or Cable or Direct Burial (Based on Ambient Temperature of 30° C, 86° F).

These ampacities relate only to conductors described in Table 310-13 in Code.

For ambient temperatures over 30° C (86° F), see Correction Factors, Note 13 in Code.

For ambient temperatures over 30° C (86° F), see Correction Factors, Note 13 in Code.

TABLE 1

Size	Temperature Rating of Conductor See Table 310-13 in Code	
	60°C (140°F)	75°C (167°F)
	Types: RUW, (14-2), T, TW, UF	Types: RH, RHW, RUH, (14-2), THW, THWN, XHHW, USE
18	---	---
16	---	---
14	15	15
12	20	20
10	30	30
8	40	45
6	55	65
4	70	85
3	80	100

Portion of Table 310-18 follows:

Allowable Ampacities of Insulated Aluminum and Copper -Clad Aluminum Conductors.

Not more than three conductors in Raceway or Cable or Direct Burial (Based on Ambient Temperature of 30° C, 86° F. These ampacities relate only to conductors described in Table 310-13 in Code.

For ambient temperatures over 30° C (86° F), see Correction Factors, Note 13 in Code.

TABLE 2


Size	Temperature Rating of Conductor See Table 310-13 in Code	
	60°C (140°F)	75°C (167°F)
	Types: RUW, (12-2), T, TW, UF	Types: RH, RHW, RUH, (12-2), THW, THWN, XHHW, USE
12	15	15
10	25	25
8	30	40
6	40	50
4	55	65
3	65	75
2	75	90
1	85	100

WIRING DIAGRAMS

P-4

SIMULTANEOUS OPERATION
3 PHASE UNBALANCED


BOTH CIRCUITS PROTECTED BY HI-LIMIT SWITCH. FOR 3 PHASE SYSTEMS, SEPARATE BLACK WIRES AND PROVIDE 3 PHASE POWER SOURCE.

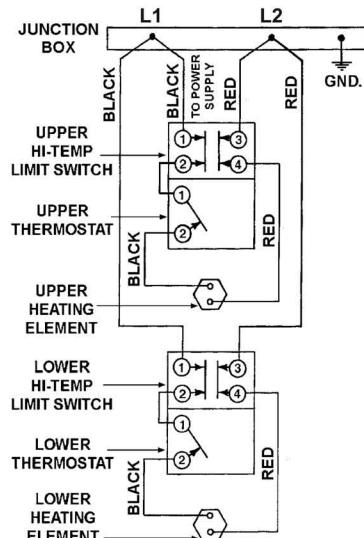

*NOTE: SOME LOWER HI-TEMP. LIMIT SWITCHES MAY HAVE 4 TERMINALS. USE ONLY THE 2 TERMINALS ON LEFT.

A-6

TWO WIRE CIRCUIT FOR NON-SIMULTANEOUS OPERATION, HAS SINGLE HIGH LIMIT CONTROL

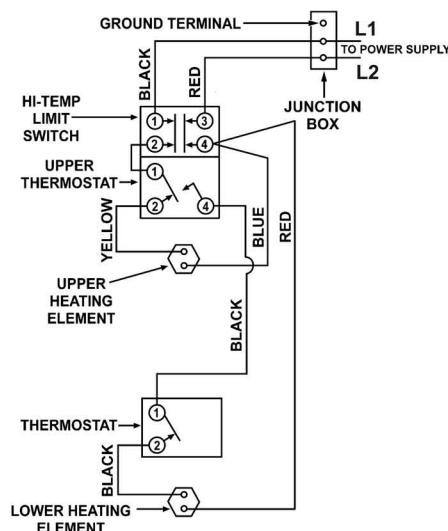

C-2

STANDARD SINGLE ELEMENT

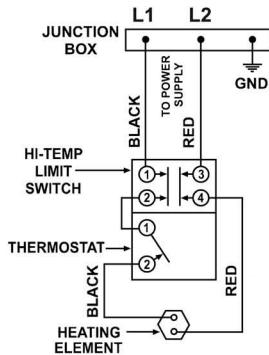


FIGURE 2

OPERATION

GENERAL

Refer to the Features and Components section of this manual (page 6) for the location of components mentioned in the instructions that follow.

NEVER turn on power to the water heater without being certain the water heater is filled with water and a temperature and pressure relief valve is installed in the relief valve opening.

DO NOT TEST ELECTRICAL SYSTEM BEFORE HEATER IS FILLED WITH WATER. FOLLOW FILLING AND START-UP INSTRUCTIONS IN OPERATION SECTION.



! DANGER

Full power is present whenever the cabinet door is opened even with the pilot switch turned off.

FILLING THE WATER HEATER

CAUTION

Property Damage Hazard

In order to avoid water heater damage, fill tank with water before operating.

1. Turn off the electrical disconnect switch.
2. Close the water heater drain valve.
3. Open a nearby hot water faucet to permit the air in the system to escape.
4. Fully open the cold water inlet pipe valve allowing the heater and piping to be filled.
5. Close the hot water faucet as water starts to flow. The heater is now ready for STARTUP and TEMPERATURE REGULATION.

INITIAL START UP

The following checks should be made by the installer when the heater is placed into operation for the first time.

1. Turn off the electrical disconnect switch.
2. Open the front panel or top access cover, check all water and electrical connections for tightness. Also check connections on top and or sides of heater. Repair water leaks and tighten electrical connections as necessary.
3. Depress the red manual reset button on each Thermostat/ECO combination control. (See Figure 4)
4. Turn on the electrical disconnect switch.
5. Observe the operation of the electrical components during the first heating cycle. Use care as the electrical circuits are energized.
6. Close the front panel or top access cover.

Temperature control and contactor operation should be checked by allowing heater to come up to temperature and shut off automatically. Use care as the electrical circuits are energized.


DRAINING THE WATER HEATER

The water heater must be drained if it is to be shut down and exposed to freezing temperatures. Maintenance and service procedures may also require draining the heater.

1. Turn off the electrical disconnect switch.
2. Open a hot water valve until the water is cool, then close the supply water inlet valve to heater.
3. Attach hose to outlet opening of drain valve and direct end to drain.
4. Open a nearby hot water faucet and the heater drain valve.
5. If the heater is being drained for an extended shutdown, it is suggested the drain valve be left open during this period. The hose may be removed.

Follow FILLING instructions when restoring hot water service.


! DANGER

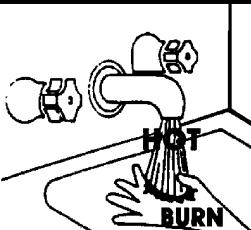

- Burn hazard
- Hot water discharge.
- Keep clear of relief valve/drain valve discharge outlet.

TEMPERATURE REGULATION

DANGER

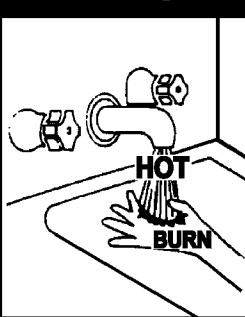

Water temperature over 125°F (52°C) can cause severe burns resulting in severe injury or death.

Children, the elderly, and the physically or mentally disabled are at highest risk for scald injury.

Feel water before bathing or showering.

Temperature limiting valves are available.

Read instruction manual for safe temperature setting.

THE WATER HEATER IS EQUIPPED WITH AN ADJUSTABLE THERMOSTAT TO CONTROL WATER TEMPERATURE. HOT WATER AT TEMPERATURES DESIRED FOR AUTOMATIC DISHWASHER AND LAUNDRY USE CAN CAUSE SCALDS RESULTING IN SERIOUS PERSONAL INJURY AND/OR DEATH. THE TEMPERATURE AT WHICH INJURY OCCURS VARIES WITH THE PERSON'S AGE AND TIME OF EXPOSURE. THE SLOWER RESPONSE TIME OF CHILDREN, AGED OR DISABLED PERSONS INCREASES THE HAZARD TO THEM. NEVER ALLOW SMALL CHILDREN TO USE A HOT WATER TAP, OR TO DRAW THEIR OWN BATH WATER. NEVER LEAVE A CHILD OR DISABLED PERSON UNATTENDED IN A BATHTUB OR SHOWER.

It is recommended that lower water temperatures be used to avoid the risk of scalding. It is further recommended, in all cases, that the water temperature thermostats (See Figure 4) be set for the lowest temperature which satisfies your hot water needs. This will also provide the most energy efficient operation of the water heater.

Figure 3 shows the approximate time-to-burn relationship for normal adult skin. The thermostats on your water heater have a linear relationship between degrees of angular rotation and the corresponding change in temperature. Thus rotating the temperature adjustment indicator 30 angular degrees will result in a 10 degree Fahrenheit change in water temperature.

Water Temperature °F (°C)	Time for 1st Degree Burn (Less Severe Burns)	Time for Permanent Burns 2nd & 3rd Degree (Most Severe Burns)
110 (43)	(normal shower temp.)	
116 (47)	(pain threshold)	
116 (47)	35 minutes	45 minutes
122 (50)	1 minute	5 minutes
131 (55)	5 seconds	25 seconds
140 (60)	2 seconds	5 seconds
149 (65)	1 second	2 seconds
154 (68)	instantaneous	1 second

(U.S. Government Memorandum, C.P.S.C., Peter L. Armstrong, Sept. 15, 1978)

FIGURE 3

TEMPERATURE ADJUSTMENT

The water temperature is controlled by surface mounted thermostats with ECO high limit. There is one mounted firmly against the tank directly above each element. The thermostats of P-4 circuit are adjustable from approximately 110°F (43°C) (lowest setting) to 150°F (66°C) (highest setting). The thermostats of A-6 circuit are adjustable from approximately 110°F (43°C) (lowest setting) to 150°F (66°C) (highest setting). The thermostat of C-2 circuit is adjustable from approximately 110°F (43°C) to 170°F (77°C). The over temperature device (ECO high limit) attached to each thermostat has a manual reset.

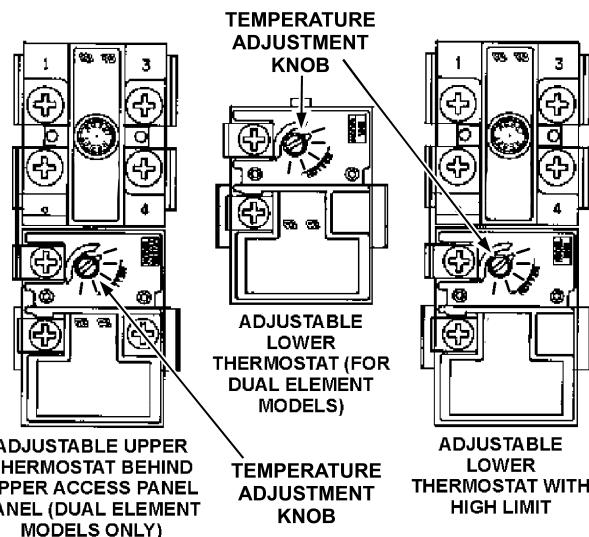


FIGURE 4

NOTE: It is not necessary to adjust the upper thermostat for a dual element unit. However, if it is adjusted above the factory set point 120°F (49°C) it is recommended that it not be set higher than the lower thermostat setting.


To change the temperature setting:

1. DANGER: Turn off the heater electrical supply. Do not attempt to adjust thermostat with power on.
2. Open the junction box door (for upper thermostat of dual element water heater only) and/or remove the (lower) thermostat access panel. Do not remove the plastic personnel protectors covering the thermostats. The thermostat is factory pre-set at 120°F (49°C).
3. Using a flat tip screwdriver, rotate the adjusting knob to the desired temperature setting.
4. Replace the covers and access panels, and turn on heater electrical supply.

MAINTENANCE

GENERAL

DANGER

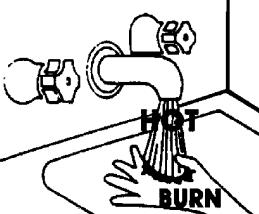

- Burn hazard
- Hot water discharge.
- Keep clear of relief valve/drain valve discharge outlet.

Periodically the drain valve should be opened and the water allowed to run until it flows clean. This will help to prevent sediment buildup in the tank bottom.

Periodically check the temperature and pressure relief valve to ensure that it is in operating condition. Lift the lever at the top of the valve several times until the valve seats properly and operates freely.

Water heater maintenance includes periodic tank flushing and cleaning, and removal of lime scale from the heating element.

The heater tank is equipped with an anode rod to aid in corrosion control.

ANODE ROD INSPECTION

CAUTION

Property Damage Hazard

- Avoid water heater damage.
- Inspection and replacement of anode rod required.

The anode rod is used to protect the tank from corrosion. Most hot water tanks are equipped with an anode rod. The submerged rod sacrifices itself to protect the tank. Instead of corroding tank, water ions attack and eat away the anode rod. This does not affect water's taste or color. The rod must be maintained to keep tank in operating condition.

Anode deterioration depends on water conductivity, not necessarily water condition. A corroded or pitted anode rod indicates high water conductivity and should be checked and/or replaced more often than an anode rod that appears to be intact. Replacement of a depleted anode rod can extend the life of your water heater. Inspection should be conducted by a qualified technician, and at a minimum should be checked annually after the warranty period.

Artificially softened water is exceedingly corrosive because the process substitutes sodium ions for magnesium and calcium ions.

The use of a water softener may decrease the life of the water heater tank.

The anode rod should be inspected after a maximum of three years and annually thereafter until the condition of the anode rod dictates its replacement.

NOTE: Artificially softened water requires the anode rod to be inspected annually.

TROUBLESHOOTING CHECKLIST

CHECKLIST

Before calling for service, check the following points to see if the cause of trouble can be identified and corrected.

Reviewing this checklist may eliminate the need of a service call and quickly restore hot water service. See Figure 1 on page 7 in this manual to identify and locate water heater components.



NOT ENOUGH OR NO HOT WATER

1. Be certain the electrical disconnect switch serving the water heater is in the ON position.
2. Check the fuses.
 - The electrical disconnect switch usually contains fuses.
3. If the water was excessively hot, and is now cold, the high limit switch may have activated.
 - See the Temperature Regulation section of this manual for more information on how to reset the ECO high limit controls.
4. The capacity of the heater may have been exceeded by a large demand for hot water.
 - Large demands require a recovery period to restore water temperature.
5. Cooler incoming water temperature will lengthen the time required to heat water to the desired temperature.
6. Look for hot water leakage.
7. Sediment or pipe scale may be affecting water heater operation.

ABNORMAL SOUNDS

1. Sediment or lime scale accumulations on the elements causes sizzling and hissing noises when the heater is operating.
 - The sounds are normal, however, the tank bottom and elements should be cleaned. See the Maintenance section of this manual.

WATER LEAKAGE IS SUSPECTED

Refer to Leakage Checkpoint on the following page 17.

1. Check to see if the heater drain valve is tightly closed.
2. If the outlet of the relief valve is leaking it may represent:
 - Excessive water temperature.
 - Faulty relief valve.
 - Excessive water pressure.
3. Excessive water pressure is the most common cause of relief valve leakage. It is often caused by a "closed system". See "Closed Water Systems" and "Thermal Expansion" in the Installation section of this manual for more information.
4. Examine the area around the element for gasket leakage.
 - Tighten the elements or, if necessary, follow the WATER AND LIME SCALE REMOVAL procedure to replace the gaskets.

IF YOU CANNOT IDENTIFY OR CORRECT THE SOURCE OF MALFUNCTION

1. Turn the power supply to the water heater off.
2. Close the supply water inlet valve to the heater.
3. Contact a Qualified Service Agency in your area. Call the toll free phone number on the back cover of this Instruction Manual for assistance in locating a service agency in your area.

REPLACEMENT PARTS

Call the toll free phone number on the back cover of this Instruction Manual for assistance in locating replacement parts.. When ordering parts, specify complete model no., serial no., (see rating plate), quantity and name of part desired. Standard hardware items should be purchased locally.

LEAKAGE CHECKPOINTS

Instructions: Use this illustration as a guide when checking for sources of water leakage. You or your dealer may be able to correct what appears to be a problem. **NOTE: Cover and Insulation shown removed to reveal tank top.**

Where possible remove or lift top cover to examine threads of fittings installed into tank for evidence of leakage. Correct fitting leaks as necessary.

Water leaks at the elements may be due to:

1. Defective element which leaks at terminals or thru flange. Replace element*.
2. Loose element/gasket leak:

- (a) Screw-in type: tighten with 1-1/2" socket wrench. If leak continues, remove element*, discard gasket and clean thread areas. Apply nonhardening Permatex Number 2 to thread areas, install new gasket and screw element into fitting until it seats. Tighten 1/2 to 3/4 turn with wrench.
- (b) Flange type: tighten screw with wrench. If leak continues remove element* and discard gasket. Clean gasket seating areas and re-install element with new gasket. A new element may be required where threads have become rusted or damaged, preventing tightening.

All water which appears at the water heater bottom or on the surrounding floor may be caused by condensation, loose connections or relief valve operation and leakage. Do not replace the water heater until full inspection of all potential leak points is made and corrective steps taken to stop the leak. Leakage from other appliances, water lines or ground (see page 16) should also be suspected until proven otherwise.

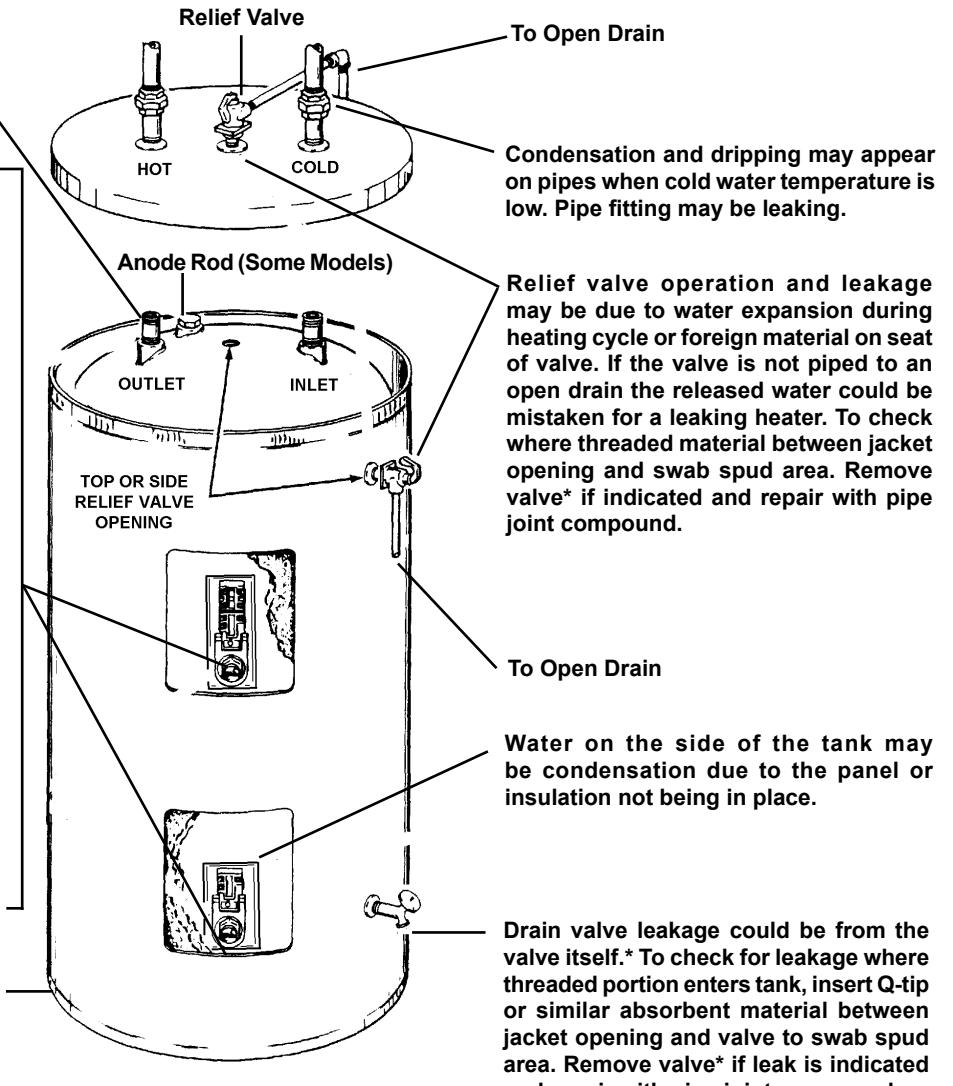


FIGURE 5

Relief valve operation and leakage may be due to water expansion during heating cycle or foreign material on seat of valve. If the valve is not piped to an open drain the released water could be mistaken for a leaking heater. To check where threaded material between jacket opening and swab spud area. Remove valve* if indicated and repair with pipe joint compound.

Water on the side of the tank may be condensation due to the panel or insulation not being in place.

Drain valve leakage could be from the valve itself.* To check for leakage where threaded portion enters tank, insert Q-tip or similar absorbent material between jacket opening and valve to swab area. Remove valve* if leak is indicated and repair with pipe joint compound.

*Contact your dealer as it is necessary to shut off electricity and drain tank to perform procedure.



RESIDENTIAL ELECTRIC WARRANTY

THIS WARRANTY IS APPLICABLE TO THE ORIGINAL OWNER ONLY. In accordance with the warranty terms and conditions specified below.

A. O. Smith Corporation (the warrantor) will furnish the ORIGINAL OWNER, 1) a replacement A. O. Smith water heater of equivalent size and current model if the glasslined tank in this water heater leaks and, 2) a replacement part for any component part which fails. Sacrificial anode rods are consumable maintenance parts and are excluded from warranty coverage.

THE A. O. SMITH WATER HEATERS REPLACEMENT MODEL OR PART WILL BE WARRANTED FOR ONLY THE UNEXPIRED PORTION OF THE ORIGINAL WARRANTY. The warranty period will be determined by the original date of purchase of the water heater, or in the absence of a Bill of Sale verifying said date, from the date of manufacture indicated on rating plate affixed to this water heater. This warranty is not transferrable and applies to models listed below:

MODELS	Tank	Parts
DEL	6-year	6-year
PCT	10-year	6-year
ECRT, ECT, ECS, ECL, EJC, EJCT, ECJ, ECLN, ECJN, EJCS	6-year	6-year

When the water heater has been used for other than single family residential application;

1. The tank warranty shall be reduced to 1 year for 6 year models and to 3 years for 10 year models.
2. The parts warranty shall be reduced to 1 year for all models.

CONDITIONS AND EXCEPTIONS

This warranty shall apply only when the water heater is installed and operated in accordance with 1) all local fire codes and plumbing codes, ordinances and regulations, 2) the printed instructions provided with it, 3) good industry practices, and 4) proper safety practices such as but not limited to a properly sized drain pan if installed in an area where leakage from the tank or its connections would result in damage to the area adjacent to the heater. In addition, a new temperature and pressure relief valve, certified by the Canadian Gas Association must have been properly installed and piped to the nearest drain.

This warranty shall apply only when the heater is:

- owned by the original purchaser;
- installed for indoor operation only;
- used at temperatures not exceeding the maximum calibrated setting of its thermostat;
- used at water pressure not exceeding the working pressure shown on the heater;
- filled with potable water, free to circulate at all times and with the tank free of damaging water sediment or scale deposits;
- used in a non-corrosive and non-contaminated atmosphere;
- used with factory approved anode(s) installed;
- in its original installation location;
- in the United States, its territories or possessions, and Canada;
- sized in accordance with proper sizing techniques for residential water heaters;
- bearing a rating plate which has not been altered, defaced or removed except as required by the warrantor;
- used in an open system or in a closed system with a properly sized and installed thermal expansion tank;
- connected to the proper voltage or;
- operated at the factory rated input;
- installed with no attempted, nor actual modification or alteration of the water heater's design in any way, including but not limited to, the attachment of non-company approved appliances or equipment, including any additional aftermarket equipment introduced into the sealed system.

Any accident to the water heater or any part thereof (including freezing, fire, floods, or lightning), any misuse, abuse or alteration of it, any operation of it in a modified form, any operation of the water heater on desalinated (deionized) water, or any damage caused by attempts to repair tank leaks or parts, will void this warranty. This warranty does not cover water heaters replaced for cosmetic reasons or for reasons of noise, taste, odor, discolored and/or rusty water. This warranty does not apply to water heaters used to heat pools, whirlpools or hot tubs or used for space heating where its sizing does not conform with specifications of the heating component manufacturer.

This warranty gives you specific legal rights, and you may have other rights which vary under the laws of each state. If any provision of this warranty is prohibited or invalid under applicable state law, that provision shall be ineffective to the extent of the prohibition or invalidity without invalidating the remainder of the affected provision or the other provisions of this warranty.

SERVICE AND LABOR RESPONSIBILITY

UNDER THIS LIMITED WARRANTY, THE WARRANTOR WILL PROVIDE ONLY A REPLACEMENT WATER HEATER OR PART THEREOF. THE OWNER IS RESPONSIBLE FOR ALL OTHER COSTS. Such costs may include but are not limited to:

- a. Labor charges for service, removal, or reinstallation of the water heater or part thereof.
- b. Shipping and delivery charges for forwarding the new water heater or replacement part from the nearest distributor and returning the claimed defective heater or part to such distributor.
- c. All cost necessary or incidental for handling and administrative charges, and for any materials and/or permits required for installation of the replacement heater or part.

LIMITATION ON IMPLIED WARRANTIES

Implied warranties, including any warranty of merchantability imposed on the sale of this heater under state law are limited to one year duration for the heater or any of its parts. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

CLAIM PROCEDURE

Any claim under this warranty should be initiated with the dealer who sold the heater, or with any other dealer handling the warrantor's products. If this is not practical, the owner should contact: A.O. Smith Corporation, 500 Tennessee Waltz Parkway, Ashland City, TN 37015. Phone: 1.800.323.2636 or visit our website: www.hotwater.com.

For Canadian customers contact: A.O. Smith Enterprises LTD., P.O. Box 310, 768 Erie Street, Stratford, Ontario N5A6T3 or phone: 1.800.265.8520

Replacement Parts may be ordered through authorized servicers or distributors. Refer to your local Yellow Pages for where to call or contact A.O. Smith Corporation, 500 Tennessee Waltz Parkway, Ashland City, TN 37015. Phone: 1.800.433.2545 or visit our website at: www.hotwater.com/parts.

The warrantor will only honor replacement with identical or similar water heater or parts thereof which are manufactured or distributed by the warrantor.

Dealer replacements are made subject to in-warranty validation by warrantor.

PROOF OF PURCHASE AND PROOF OF INSTALLATION DATE ARE REQUIRED TO SUPPORT WARRANTY CLAIM FROM ORIGINAL OWNER. THIS FORM DOES NOT CONSTITUTE PROOF OF PURCHASE OR PROOF OF INSTALLATION.

DISCLAIMERS

NO EXPRESSED WARRANTY HAS BEEN OR WILL BE MADE IN BEHALF OF THE WARRANTOR WITH RESPECT TO THE MERCHANTABILITY OF THE HEATER OR THE INSTALLATION, OPERATION, REPAIR OR REPLACEMENT OF THE HEATER OR PARTS. THE WARRANTOR SHALL NOT BE RESPONSIBLE FOR WATER DAMAGE, LOSS OF USE OF THE UNIT, INCONVENIENCE, LOSS OR DAMAGE TO PERSONAL PROPERTY, OR OTHER CONSEQUENTIAL DAMAGE. THE WARRANTOR SHALL NOT BE LIABLE BY VIRTUE OF THIS WARRANTY OR OTHERWISE FOR DAMAGE TO ANY PERSONS OR PROPERTY, WHETHER DIRECT OR INDIRECT, AND WHETHER ARISING IN CONTRACT OR IN TORT.

Should governmental regulations or industry standards prohibit the Manufacturer from furnishing a comparable model replacement under this warranty, the Owner will be furnished with the closest comparable water heater meeting the then current governmental regulations and industry standards. A supplementary fee may be assessed to cover the additional cost associated with the changes made to meet applicable regulations and standards. The limited warranty is voided if the maintenance procedures listed in the owner's instruction manual are not followed.

IMPORTANT INFORMATION

Model Number _____

Serial Number _____

INSTALLATION INFORMATION

Date Installed _____

Company's Name _____

Street or P.O. Box _____

City, State, and Zip Code _____

Phone Number _____

Plumber's Name _____



REPAIR PARTS LIST

Now that you have purchased this water heater, should a need ever exist for repair parts or service, simply contact the company it was purchased from or direct from the manufacturer listed on the rating plate on the water heater.

Selling prices will be furnished on request or parts will be shipped at prevailing prices and you will be billed accordingly.

The model number of your Water Heater will be found on the rating plated located above the lower access panel.

Be sure to provide all pertinent facts when you call or visit.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

- MODEL NUMBER
- VOLTAGE AND ELEMENT WATTAGE
- SERIAL NUMBER
- PART DESCRIPTION

LOWBOY AND UPRIGHT ELECTRIC MODELS (Single and Dual Element)

Key No.	Part Description
1	Temperature-Pressure Relief Valve
2	Secondary Anode Rod/Nipple w/Heat Trap*
3	Element w/Gasket
4	Element Gasket
5	Lower Outer Door
6	Terminal Cover (Double Element)
7	Upper Thermostat w/Hi Limit
8	Terminal Cover
9	Lower Thermostat
10	Terminal Cover
11	Lower Thermostat
12	Thermostat Bracket (ea).
13	Drain Valve
14	Primary Anode
15	Dip Tube
16	Nipple w/Heat Traps*
17	Upper Outer Door
18	Base Pan w/Side Drain
19	Pipe Insulation*
20	T & P Insulation
**	Instruction Manual

* If Applicable

** Not Illustrated

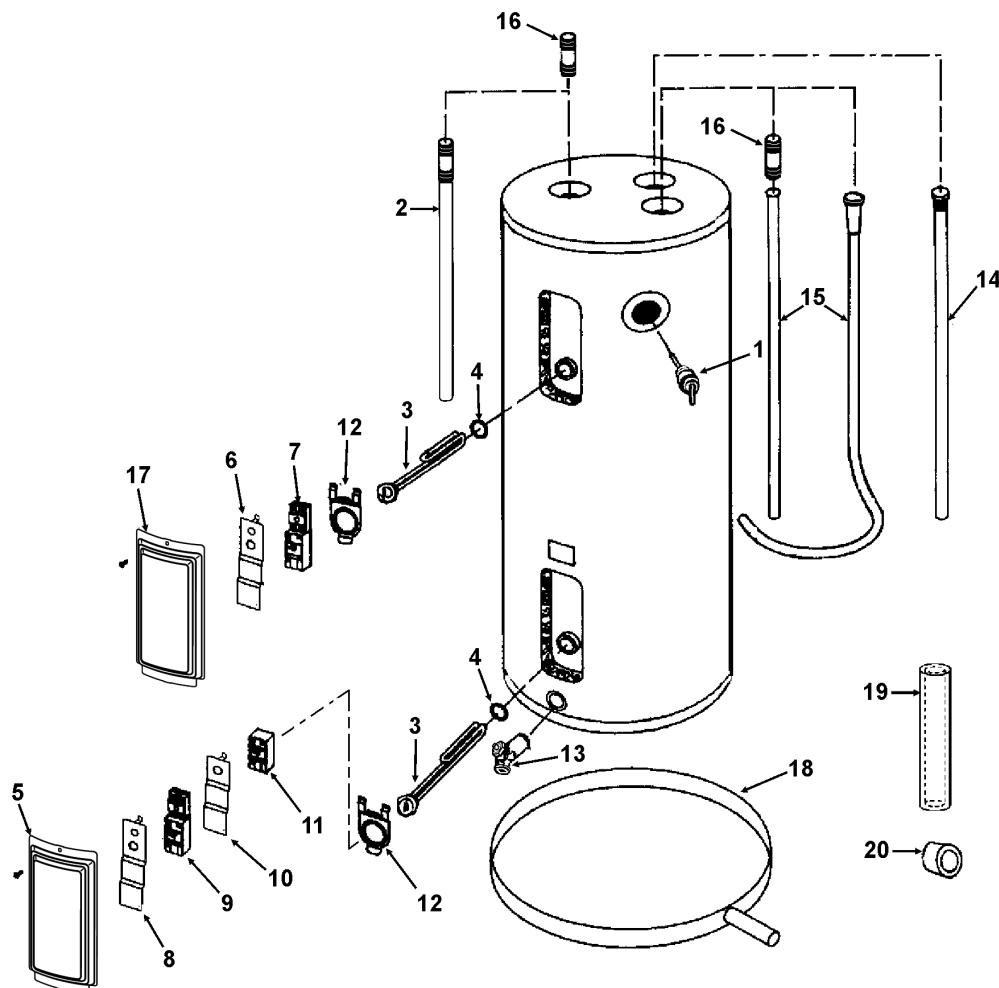


FIGURE 6

REPAIR PARTS LIST

COMPACT ELECTRIC MODELS

Key No.	Part Description		
1	Temperature-Pressure Relief Valve	13	Upper Outer Door
2	Outlet Nipple Assembly	14	Upper Thermostat w/Hi/Limit
3	Inlet Nipple	15	Anode Rod
4	Junction Box Cover	16	Drain Valve
5	Upper and Lower Element	17	Base Pan w/Side Drain
6	Element Gasket	18	Conduit Bracket
7	Thermostat Bracket (ea.)	19	Pipe Insulation*
8	Lower Thermostat	20	T & P Insulation*
9	Terminal Cover	21	Dip Tube
10	Lower Thermostat w/Hi Limit	22	Plug
11	Terminal Cover	**	Instruction Manual
12	Lower Outer Door		

* If Applicable

** Not Illustrated

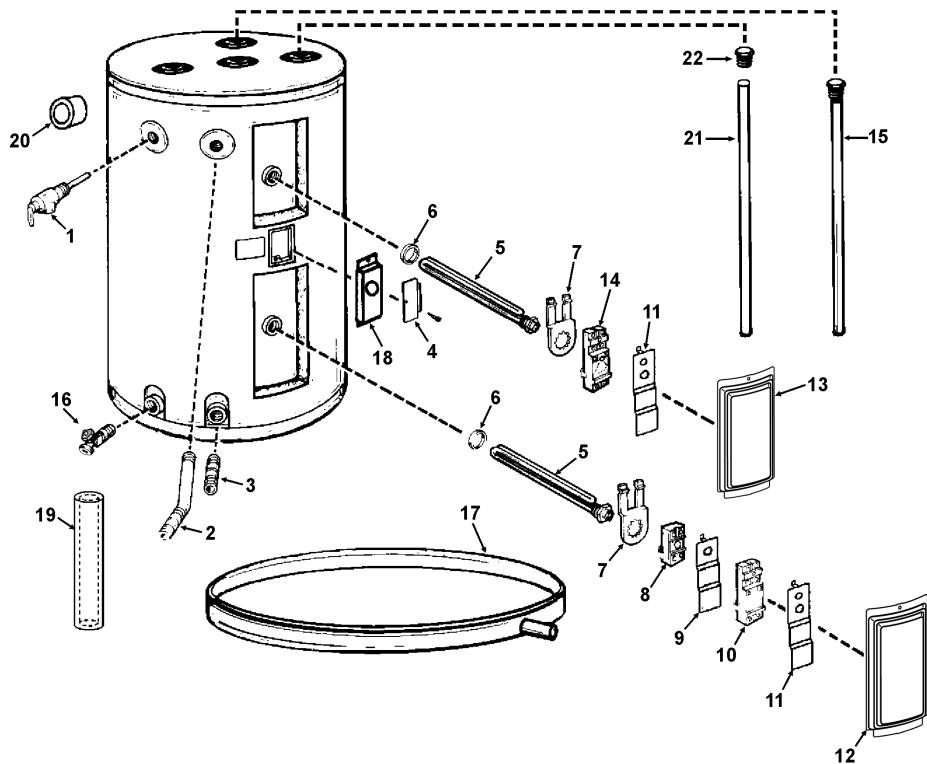


FIGURE 7

NOTES

NOTES



www.hotwater.com

500 Tennessee Waltz Parkway, Ashland City, TN 37015
Tech Support: 800-527-1953
Parts: 800-433-2545

Copyright © 2013 A. O. Smith Water Heater Corporation, All rights reserved.

ஆதார தொடர்பு : A. O. Smith Water Heater Corporation 2013 © அதோடு தொடர்பு வாய்த்


800-433-2545 : இல்லை

800-527-1953 : இல்லை

500 Tennessee Valley Parkway, Ashland City, TN 37015

www.hotwater.com



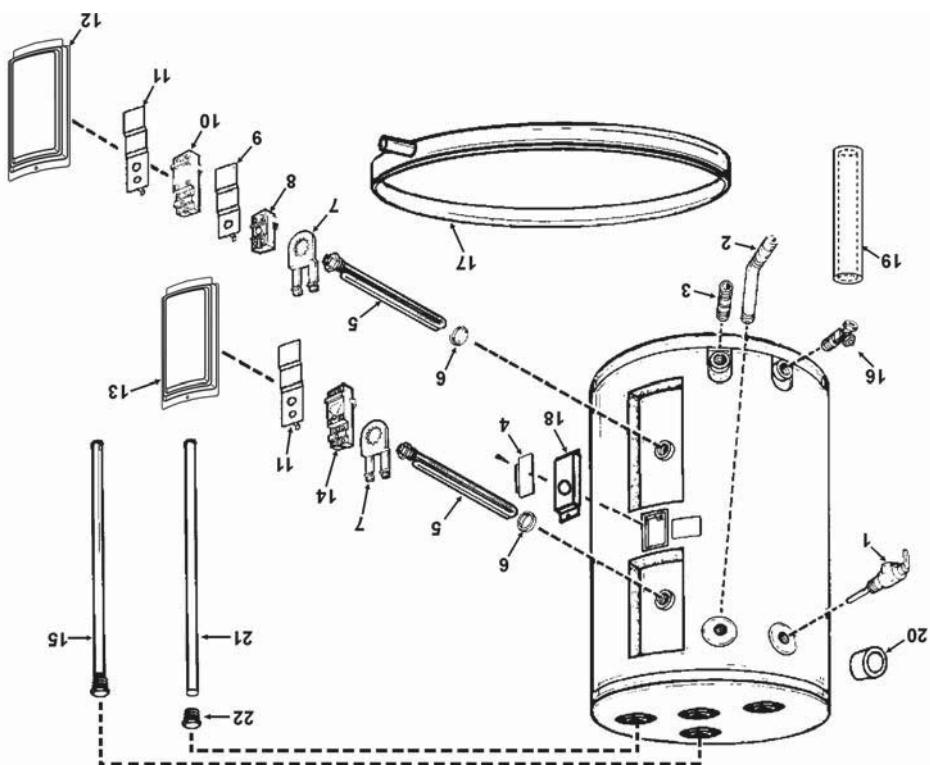


የመሸሪያ አገልግሎት
የመሸሪያ አገልግሎት

የመሸሪያ አገልግሎት	የመሸሪያ አገልግሎት	የመሸሪያ አገልግሎት
12	11	**
10	22	የመሸሪያ አገልግሎት
9	21	የመሸሪያ አገልግሎት
8	20	*የመሸሪያ አገልግሎት
7	19	*የመሸሪያ አገልግሎት
6	18	የመሸሪያ አገልግሎት
5	17	የመሸሪያ አገልግሎት
4	16	የመሸሪያ አገልግሎት
3	15	የመሸሪያ አገልግሎት
2	14	*የመሸሪያ አገልግሎት
1	13	የመሸሪያ አገልግሎት

የመሸሪያ አገልግሎት ተስተካክለሁ

6. የፌዴራል

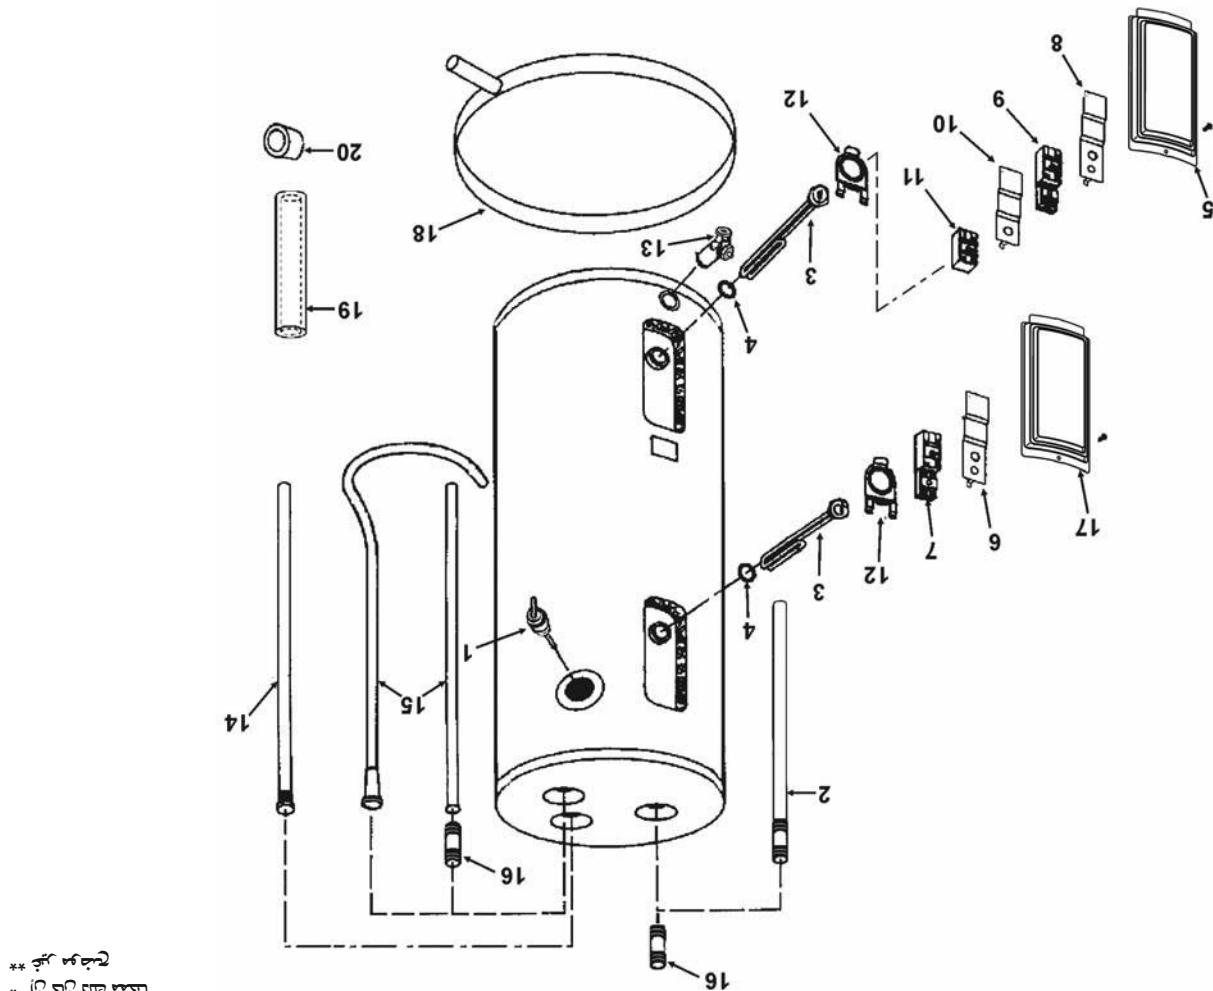

ይህ ደንብ በፌዴራል
የሚከተሉት ስም ነው

11	የመስቀል ማስቀመጥ
10	የመስቀል ማስቀመጥ
9	የመስቀል ማስቀመጥ
8	የመስቀል ማስቀመጥ
7	የመስቀል ማስቀመጥ
6	(የመስቀል ማስቀመጥ) የመስቀል ማስቀመጥ
5	የመስቀል ማስቀመጥ
4	የመስቀል ማስቀመጥ
15	የመስቀል ማስቀመጥ
3	የመስቀል ማስቀመጥ
2	የመስቀል ማስቀመጥ
1	(የመስቀል ማስቀመጥ) የመስቀል ማስቀመጥ
የመስቀል ማስቀመጥ የፌዴራል	
20	የመስቀል ማስቀመጥ
19	የመስቀል ማስቀመጥ
18	የመስቀል ማስቀመጥ
17	የመስቀል ማስቀመጥ
16	የመስቀል ማስቀመጥ
14	የመስቀል ማስቀመጥ
13	የመስቀል ማስቀመጥ
12	(የመስቀል ማስቀመጥ) የመስቀል ማስቀመጥ

(የመስቀል ማስቀመጥ) የመስቀል ማስቀመጥ የፌዴራል የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የፌዴራል የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

• የመስቀል ማስቀመጥ

• የመስቀል ማስቀመጥ

• የመስቀል ማስቀመጥ

• የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ የመስቀል ማስቀመጥ

የመስቀል ማስቀመጥ

U.S.A. Smith Corporation 1500 Wall Parkway, Ashland City, TN 37015
500 Tennessee Water Parkway, Ashland City, TN 37015
U.S.A. Smith Corporation 1500 Wall Parkway, Ashland City, TN 37015
www.hotwater.com/parts

A.O. Smith Enterprises LTD., 768 Erie Street, Stratford, Ontario N5A6T3
P.O. Box 310, 768 Erie Street, Stratford, Ontario N5A6T3
1.800.265.8520 : www.aosmith.ca

Mr. & Mrs. J. W. Smith
Smith Corporation
500 Tennessee Valley Parkway
Ashland City, TN 37015
1-800-323-2636
www.hotwater.com

۱۵۰ |

|| ፳፻፭፻ || የዚህን ትኩስ እና የዚህን ማረጋገጫ

କୁଣ୍ଡଳ ପାତାର ମଧ୍ୟରେ ଦେଖିଲା ଏହାର ନାମ କିମ୍ବା କିମ୍ବା

၁၃၂။ ၁၃၃။ ၁၃၄။ ၁၃၅။ ၁၃၆။ ၁၃၇။ ၁၃၈။ ၁၃၉။ ၁၃၁။ ၁၃၂။ ၁၃၃။ ၁၃၄။ ၁၃၅။ ၁၃၆။ ၁၃၇။ ၁၃၈။ ၁၃၉။

ନୀ ଲୋକ ପାଇଁ ଆମିର ଏ ହାତରେ
ଦେଖିଲୁ ଆମିର ପାଇଁ କିମ୍ବା କିମ୍ବା କିମ୍ବା

ՀԱՅՈՒԹՅՈՒՆ

(၁၃) မြန်မာ	_____
(၁၄) မြန်မာ	_____
(၁၅) မြန်မာ သိပ္ပါယ်၊ မြန်မာ ပြည်တော်	_____
(၁၆) မြန်မာ ပြည်တော်	_____
(၁၇) မြန်မာ ပြည်တော်	_____
(၁၈) မြန်မာ ပြည်တော်	_____
(၁၉) မြန်မာ ပြည်တော်	_____
(၂၀) မြန်မာ ပြည်တော်	_____
(၂၁) မြန်မာ ပြည်တော်	_____
(၂၂) မြန်မာ ပြည်တော်	_____

ପାତ୍ର କାମନାଟିହୁଣ୍ଡି
କାମନାଟିହୁଣ୍ଡି ପାତ୍ର

५

፲፻፲፭ ዓ.ም.

କାହାର ପାଦରେ ତାହାର ପାଦରେ କାହାର ପାଦରେ
କାହାର ପାଦରେ ତାହାର ପାଦରେ କାହାର ପାଦରେ


၁၇

၁၆၂၃ ရှင်းကြောင်း အမျိန့်မျိန့် ပါ လိမ့်နောက် ရွှေခြေမြေ

፩፻፭፻

Digitized by srujanika@gmail.com

፳፻፲፭ ዓ.ም. በ፳፻፲፭ እንደሆነው ተስተካክለ እና ስርዓት የሚያስፈልግ የሚከተሉ የፌዴራል ማረጋገጫ መሆኑን የሚያሳይ የሚያስፈልግ የሚከተሉ የፌዴራል ማረጋገጫ መሆኑን የሚያሳይ

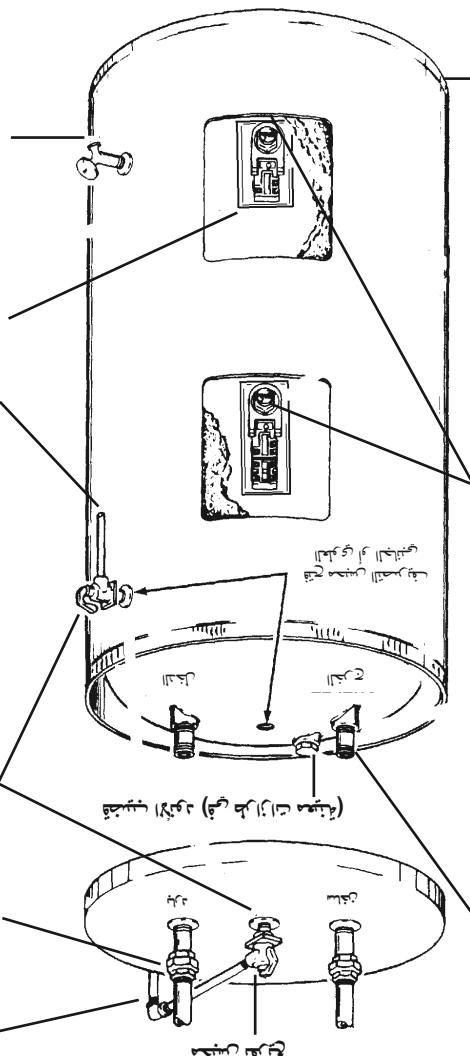

३८

କୁଣ୍ଡଳ ପାଦାରୀ । ଏହାର ପାଦାରୀ କିମ୍ବା କିମ୍ବା
କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା
କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା

Digitized by srujanika@gmail.com

፳፻፲፭ የፌዴራል ተቋማ

၁၆ ရန်ကုန်မြို့၏ အမြတ်ဆင့် ပေါ်လောက်ခဲ့သူများ

תְּנַשֵּׁא בְּפִזְבָּחָן (לְאַמְתִּיבָּה) וְתַעֲשֶׂה כְּלָמִידָה:

وَالْمُؤْمِنُونَ الْمُؤْمِنَاتُ وَالْمُؤْمِنُونَ الْمُؤْمِنَاتُ

—**କେବଳ ଏହାର ପରିମା ଅଧିକ ହେଉଥିଲା**—

ପ୍ରକାଶ କରିବାରେ ଏହାରେ ମଧ୍ୟ ଦେଖିବାରେ ଏହାରେ ମଧ୍ୟ

፩፻፲፭ የፌትሬ ተግባር

ପ୍ରକାଶକ: ପ୍ରକାଶକ ହାତୁମାନ୍ ପ୍ରକାଶନ କେନ୍ଦ୍ର ପ୍ରକାଶନ ଏତେବେଳେ ପରିଚାରିତ ହେଲାମାତ୍ରାଣିରେ ପରିଚାରିତ ହେଲାମାତ୍ରାଣିରେ

הַתְּבִ�ָה

7. ຖະໜົນ ມານີ້ນັ້ນ ສັນຕິພາບ ທີ່ ດີວີ່ ຕັດ ຢຸ່ມ

9. የፌርማ እና ተግባር ስለሚከተሉት የሚገኘውን የሚያሳይ.

၁၃၇

၅. နှင့် အမြဲ အရာတွေ၊ ဘုရား ပုဂ္ဂနိုင် အမြဲ အရာတွေ

- ପ୍ରକାଶନ ପାଇଁ କୁଟୀ କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା

“**የኢትዮጵያ የተከፈለውን አገልግሎት እና ተቋማዎች**” ነው ।

•**ECG** (Electrocardiogram) : It is a graph showing the electrical activity of the heart.

- ເນື້ອງສະຫຼຸບມີຄວາມຮັດຕະກຳ ແລ້ວ ສະຫຼຸບມີຄວາມຮັດຕະກຳ ລົງທະບຽນ ທີ່ ພົມບັນຍາ ທີ່ ດັບກຳນົດ

- ገጽ ብቻ ከሚታወቂ የሚከተሉ የትምህር ዕቅድ መመሪያ ተስፋዋል.

• 2

କୁଣ୍ଡଳ ପାତାରେ ଦେଖିଲୁ କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା କିମ୍ବା

፳፻፭፻ ዓ.ም ታደሰ ቤት የፌዴራል



ગુજરાતી

କାହାର ପାଇଁ କାହାର ପାଇଁ କାହାର ପାଇଁ କାହାର ପାଇଁ କାହାର ପାଇଁ କାହାର ପାଇଁ

କାନ୍ତିର ପାଦମୁଖରେ ପାଦମୁଖରେ ପାଦମୁଖରେ ପାଦମୁଖରେ

אַתָּה יְהוָה

‘କାହାର ପାଦରେ ଯାଏନ୍ତି କାହାର ପାଦରେ ଯାଏନ୍ତି’ ।

፩. ተ. የዚህ ስንጻ የሚችሉ ነው በግብር

କିମ୍ବା କିମ୍ବା କିମ୍ବା ?

Digitized by srujanika@gmail.com

- క్రికెట్ కీ బాస్కెట్ ప్రార్థన.
 - అమ్లి కీ బాస్కెట్ ప్రార్థన.
 - క్రికెట్ కీ ఎంబ్రేజ్ ఏచ్‌బ్రో ప్రార్థన.

፳፻፲፭ ዓ.ም. ከዚህ በቃል ስርዓት የሚከተሉት ደንብ ተስፋል ይገባል፡፡

፩፻፲፭ የፌዴራል አስተዳደር ማመልከት ተችሱ ይችላል

၁၇၈၂ ခုနှစ်၊ မြန်မာနိုင်ငံ၊ ရန်ကုန်မြို့၏ အနောက်

፳፻፲፭ የሰውን ትርጓሜ

४८ | शास्त्र

- ଶ୍ରୀ ହାର୍ଦିକ ପାତ୍ରଙ୍କୁ ନାହିଁ ମାତ୍ର ଏହାରେ ପାଦିଷ୍ଠାନିକ କାନ୍ତି କାହାରେ ଥିଲା ନାହିଁ ।


የኢትዮጵያ ቤትና የሚከተሉት ስምዎችን አለመት ይህንን የሚከተሉት ስምዎችን አለመት ይህንን

גָּדוֹלָה

॥३८॥

କୁର୍ରା ହେଲିଗି ପାହାନ୍ତିରେ ଦେଖିଲା କିମ୍ବା କିମ୍ବା କିମ୍ବା

କାନ୍ତିର ପାଦରେ ମହାଶୁଣ୍ଡଳ ଏହାର ପାଦରେ ମହାଶୁଣ୍ଡଳ

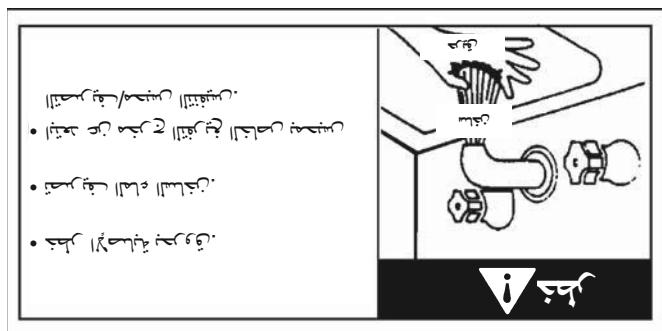


۷۴

אברהם

- **רְשָׁאָתִים וּמִשְׁנָתִים**
 - **רְשָׁאָתִים וּמִשְׁנָתִים**

תַּחֲנוֹן

٢٣

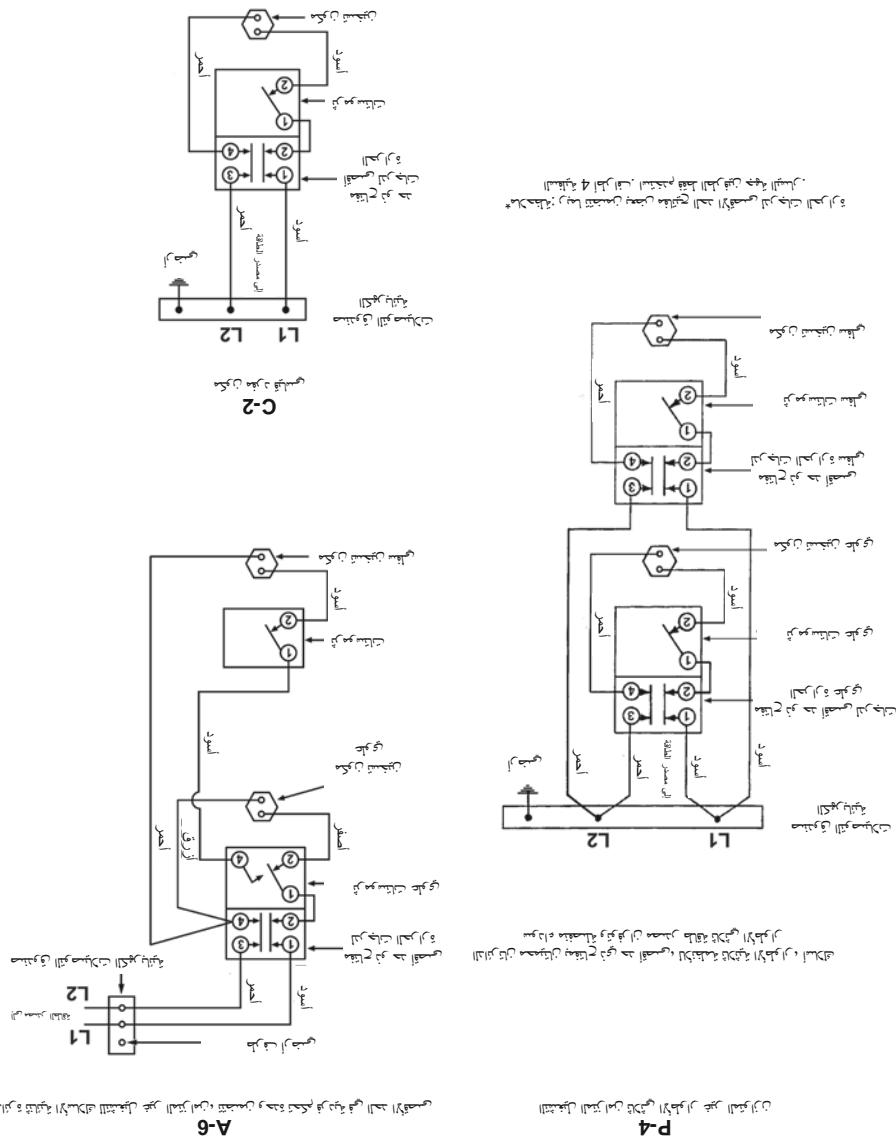

፳፻፲፭ ዓ.ም. በፌዴራል/ሚኒስትር የኢትዮጵያ ማኅበር ንግድ ደንብ
የመስረተው የሚከተሉት የሚመለከት ስምዎች የሚከተሉት የሚመለከት ስምዎች


የኢትዮጵያውያንድ ስራውን ተስተካክለሁ.

କେବଳ ଏହାର ପାଇଁ ଆମେ କିମ୍ବା ?

କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ କାହିଁ

Digitized by srujanika@gmail.com

የኢትዮጵያውያንድ የሚከተሉት በቻ እና ስራ መሆኑን የሚያስፈልግ ይችላል፡፡

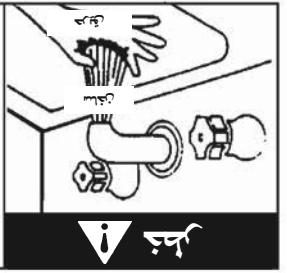

କୁଳ ପାତାର ଦେଖିଲୁ ଏହି ପାତାର କିମ୍ବା କିମ୍ବା କିମ୍ବା

፭. የሚከተሉት በቻ ንግድ ስምምነት መረጃ ይፈጸማል

4. የዕለታዊ ሪፖርት በመሆኑ እንደሚከተሉት ይገልጻል፡፡

3. **የኢትዮጵያ የሰውን ተቋማዊ ስራውን አገልግሎት**

፩. የሚከተሉት ማረጋገጫዎች በመሆኑ አንቀጽ ተስፊነት

የኢትዮጵያ የወጪ ተስፋ ነው እና የሚከተሉ የወጪ ተስፋ ነው እና የሚከተሉ የወጪ ተስፋ ነው

תְּרִיכָּמִים

四

ମେ କୋଟି ହାତରୁକୁ ରଖିବୁ

ମନ୍ଦିରରେ ପାଲିବା ପାରିବା ଆମରେ କମିଷନରେ ଉପରେ
ମନ୍ଦିରରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ କମିଷନରେ
ମନ୍ଦିରରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଅଣି କି ରହୁଳ ଜୀ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ମନ୍ଦିରରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଗାନ୍ଧି ମୂଳବିରୁଦ୍ଧ

ମନ୍ଦିର ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ମନ୍ଦିର ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଗାନ୍ଧି ମୂଳବିରୁଦ୍ଧ

ମନ୍ଦିର ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ
କମିଷନରେ ଉପରେ ଆମରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ ଏଥିରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ (୧.୫ ଲକ୍ଷ) ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ
ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ (୧.୫ ଲକ୍ଷ) ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ ୧୯୩୦ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

- ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ
- ଏଥିରେ ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ

ଗାନ୍ଧି ମୂଳବିରୁଦ୍ଧ

 


ମନ୍ଦିର ପାଲିବା କମିଷନରେ ଉପରେ ଆମରେ


କର୍ମ ବିଶ୍ଵାସ ପାଲିବା କମିଷନରେ

1 ከፍታ

7. በዚህ ውስጥ ጥሩ ንብረቱ ስምም ሰራተኞች ነው ሲሆን ነው ስለሚሸጠው የሚከተሉት ዘመኑ ይዘሩ ነው:




እኔ የዚህ አይነት ውስጥ ነው ሲሆን ነው የሚከተሉት ዘመኑ ይዘሩ ነው:

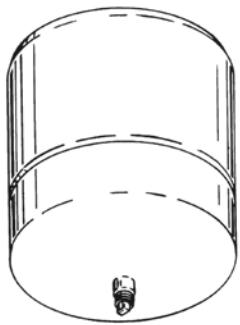


ይህ ውስጥ የሚከተሉት ዘመኑ ይዘሩ ነው:

ይህ ውስጥ በዚህ ውስጥ የሚከተሉት ዘመኑ ይዘሩ ነው:

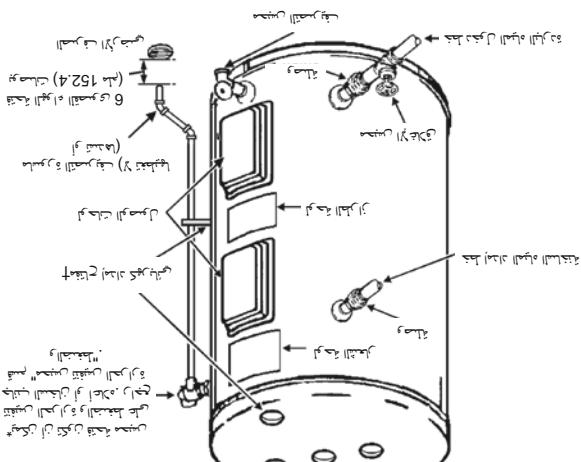

ለሚከተሉት ዘመኑ

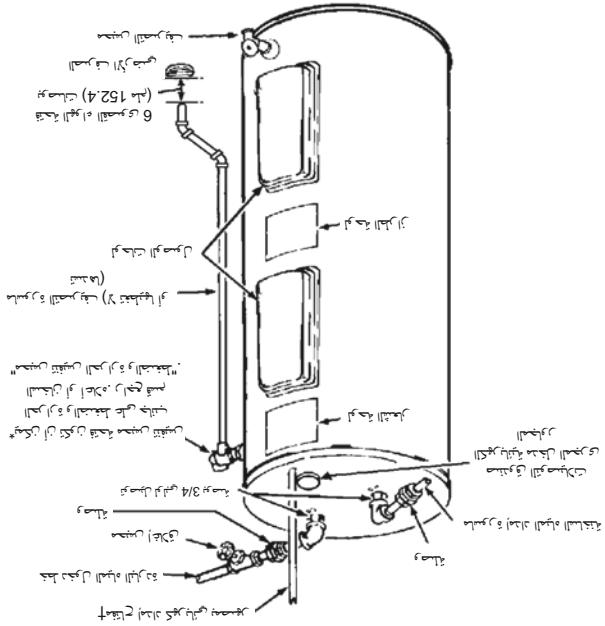

ለሚከተሉት ዘመኑ

የሚከተሉት ዘመኑ የሚከተሉት ዘመኑ የሚከተሉት ዘመኑ የሚከተሉት ዘመኑ የሚከተሉት ዘመኑ

MODEL NUMBER	SERIAL NUMBER	ITEM ID / PART NUMBER						
RESIDENTIAL STORAGE TANK WATER HEATER								
IPX1								
Ph	V	Hz	No. of ELEMENTS	W (WATTS)	EACH	TOTAL	PSI	KPa
MAXIMUM WORKING PRESSURE								
US GAL (LITERS)								
CAPACITY								

רְזֵדְגִּידָה

- **ANSI** - **ASME** - **NEC** - **NFPA** - **UL**

“**କାନ୍ତିର ପଦମାଲା**” ଏହାର ଅଧିକାରୀ ହେଉଥିଲା ଶ୍ରୀ କଣ୍ଠଚନ୍ଦ୍ର ପାତ୍ର।

ગણ કર્તાનું/શરીર જીવન એ છે (એ કાણાનું).
 જીવનનું/જીવાન (એ જીવન એ કરું)
 એદ્ધા:

<p>ମାତ୍ରା:</p> <ul style="list-style-type: none"> କେବୁ ପରିମାଣରେ ଦେଖିଲୁ ହେଉଥାଏ ଅନୁଭବ କରିବାକୁ ପରିଚାରିତ କରିବାକୁ ପରିଚାରିତ କରିବାକୁ କେବୁ କେବୁ କରିବାକୁ ପରିଚାରିତ କରିବାକୁ ପରିଚାରିତ କରିବାକୁ କେବୁ କେବୁ କରିବାକୁ ପରିଚାରିତ କରିବାକୁ 	
---	--

କାହାର କି କେତ୍ତି ହା ପାଣି ମୁହଁର ଲାଗିଛି । କାହାର
ପାନୀଙ୍କ କି କାହାର କାହାର ଶୁଣି । ଅଳ୍ପକାହାର କାହାର କାହାର
କାହାର କାହାର କାହାର କାହାର କାହାର କାହାର ।




ଶୁଣୁ କରିବାକୁ ହୁଏ ଦେଖିବାକୁ ପାଇଁ ଆଜିର କାହାରେ ନାହିଁ । କାହାରେ ନାହିଁ କାହାରେ ନାହିଁ । କାହାରେ ନାହିଁ । କାହାରେ ନାହିଁ ।

የመሆኑን የሚያስቀርብ በዚህ ስምምነት እና የመሆኑን የሚያስቀርብ በዚህ ስምምነት እና

၄။ မြန်မာ့ရုပ်ပေါင်း။

۲۷۸


୧୮୯୩

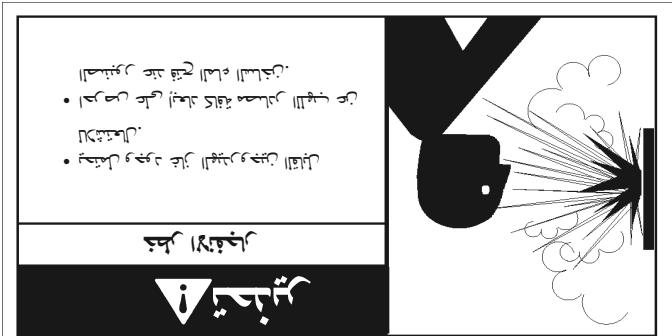

ජ්‍යා ප්‍රියාචන්ද (ඉරු පැහැදිලි)

፲፻፲፭

ପ୍ରକାଶିତ ଗୁଣ୍ଡାଙ୍କି ଏବଂ ପାଇଁ ପାଇଁ ପାଇଁ ପାଇଁ

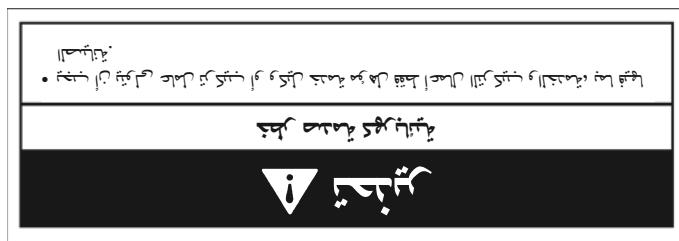

• دستور امنیتی فرماندهی انتظامی است که برای درکار و براحتی اجرا نمودن مأموریت‌ها و اینکه براحتی و سریعه تر انجام شوند از این دستور استفاده می‌شود.

۳.۳.۸۳ پیمان Z223.۱ ۲۰۰۶ (ANSI) مخاطب ایجاد کننده

دستور امنیتی مخاطب ایجاد کننده آن باید مطابق با پیمان Z223.۱ ۲۰۰۶ (ANSI) باشد.

• مخاطب ایجاد کننده

هشدار هایی

هشدار هایی که در این پیمان ارائه شده اند در اینجا آورده شده اند و ممکن است با این هشدار ها متفاوت باشند.




لایه	هشداری، هیئتی، کیفیتی و کیفیتی کاری، مراقبتی و نهادی ایجاد کننده هایی که در این پیمان ارائه شده اند
	هشداری، هیئتی، کیفیتی و کیفیتی کاری، مراقبتی و نهادی ایجاد کننده هایی که در این پیمان ارائه شده اند
	هشداری، هیئتی، کیفیتی و کیفیتی کاری، مراقبتی و نهادی ایجاد کننده هایی که در این پیمان ارائه شده اند
	هشداری، هیئتی، کیفیتی و کیفیتی کاری، مراقبتی و نهادی ایجاد کننده هایی که در این پیمان ارائه شده اند
	هشداری، هیئتی، کیفیتی و کیفیتی کاری، مراقبتی و نهادی ایجاد کننده هایی که در این پیمان ارائه شده اند

هشداری

هشداری ایجاد کننده هایی که در این پیمان ارائه شده اند هستند و ممکن است با این هشدار ها متفاوت باشند.

مأموریت هایی که در این پیمان ارائه شده اند هستند و ممکن است با این هشدار ها متفاوت باشند.

א. אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-

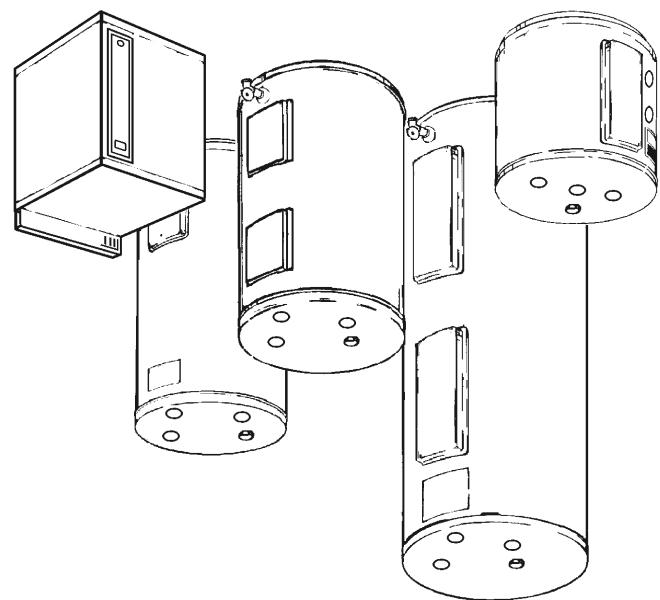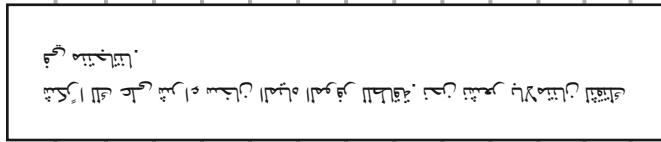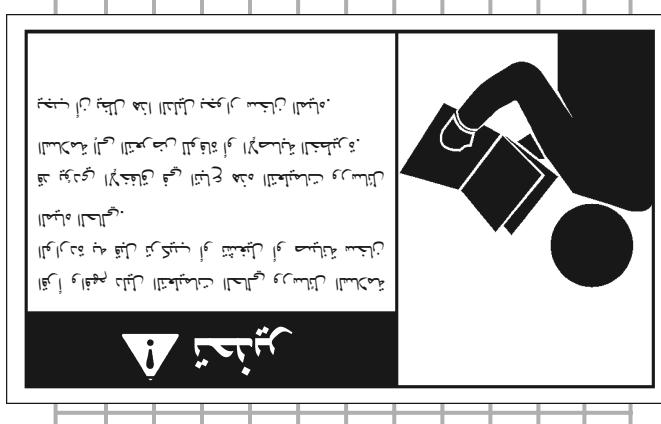

500 Tennessee Valley Parkway
Ashland City, TN 37015

AOSmith

א. אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-

ב. אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-

כ. אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-

אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-

אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ- אסםיתן תבונת כ- 30 מ' מ-